

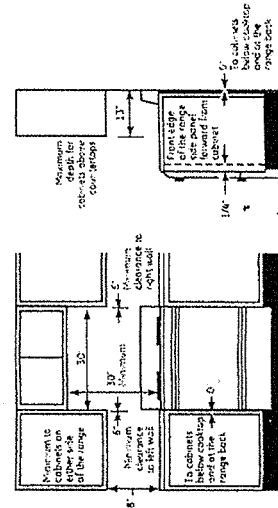


Provide adequate clearances between the frame and adjacent combustible surfaces. These dimensions must be met for safe use of hearth.

Flow 30-176.2 cm/min; air clearance between buffers and bottom of unprotected wood or metal cabinet, or flow 0.24-1.51 cm/min when bottom of wood or metal cabinet is protected by no less than 1.4 to 16 mm thick flame-retardant material covered with no less than 10-28 MSQ mesh material (0.05-1.06 mm).

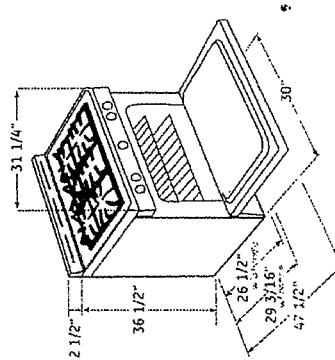

DIMENSIONS AND CLEARANCES (CONT.)

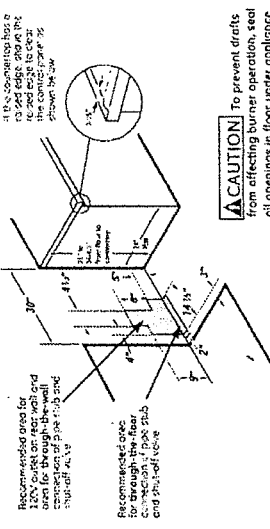


CAUTION To prevent drafts from affecting burner operation, seal oil openings in floor under appliance and behind appliance wall.

CONVERTING TO LP GAS
(OR CONVERTING BACK TO
NATURAL GAS FROM LP)

This range leaves the factory set for use with natural gas. If you want to convert to LP gas, the conversion must be performed by a qualified LP gas installer.

The conversion offices and instructions can be found on back of the range

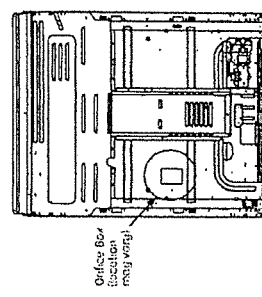

LF One-Side Holder
same models;



View from front with
Warming Drawer removed

612

31-10858 04-13 GE




DIMENSIONS AND CLEARANCES

Provide adequate clearances between the range and adjacent combustible surfaces. These dimensions must be met for safe use of your range.

Allow 30" (76.2 cm) minimum clearance between burners and bottom of unprotected wood or metal cabinet, or allow a 24" (61 cm) minimum when bottom of wood or metal cabinet is protected by no less than 1/4" (6.4 mm) thick flame-retardant millboard covered with no less than No. 29 MSG sheet metal (0.15" [3.8 mm])

thick, 0.15" (3.8 mm) thick stainless steel, 0.25" (6.4 mm) aluminum or 0.20" (5.1 mm) copper installation of a listed microwave oven or cooking appliance over the cooktop shall conform to the installation instructions packed with that appliance.


For island installation, maintain 2-1/2" minimum from cutout to back edge of countertop and 3" minimum from cutout to side edges of countertop.

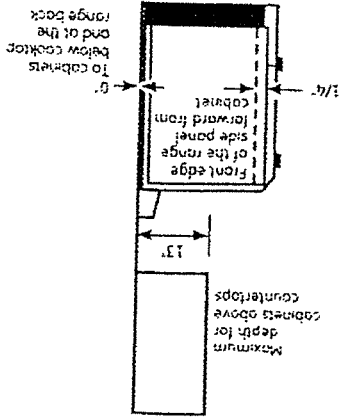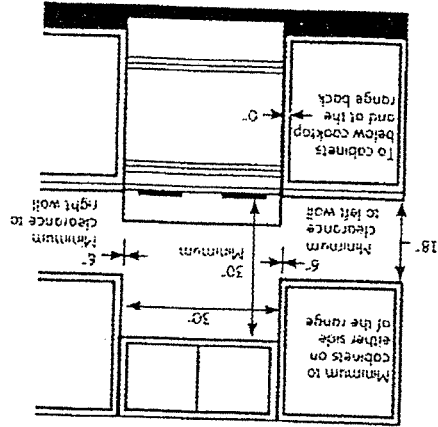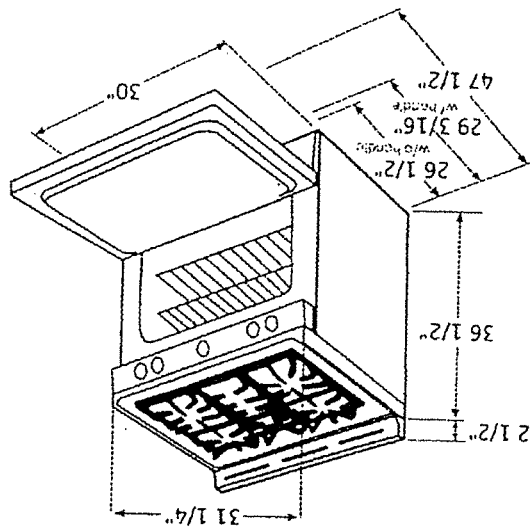

612

DIMENSIONS AND CLEARANCES (CONT.)

GAS PIPE AND ELECTRICAL OUTLET LOCATIONS

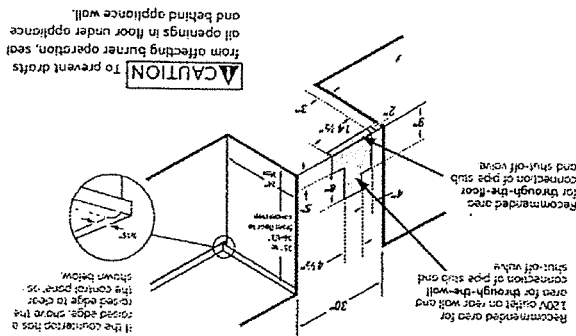

CONVERTING TO LP GAS (OR CONVERTING BACK TO NATURAL GAS FROM LP)

 
This range leaves the factory set for use with natural gas. If you want to convert to LP gas, the conversion must be performed by a qualified LP gas installer.

The conversion orifices and instructions can be found on back of the range.

Keep these instructions and all orifices in case you want to convert back to natural gas.

LP Orifice Spud Holder (some models)

View from front with Warming Drawer removed



Rear of