

GOEMANS APPLIANCES

1-877-463-6267

HST # 105167993 WWW.GOEMANS.COM
Find us on Facebook at www.facebook.com/GoemansAppliances

PACKING SLIP

HB000012955-1

Salesperson: MIKE ALBANESE
Purchase Date: 9/20/16
Invoice Finished Date:
Delivery/Pickup Date: Jan 26, 2017
Invoice Type: VBL
Date Printed: Sep 20, 2016
Page: 1

ONLINE BANKING ACCOUNT

BILL TO: 9054245958

NURSE, ANETTE
75 RIMROCK CRES
LOT 23
WHITBY, ON TBA

TEL# (905) 424-5958 BUS#

Directions: GTA

SHIP TO: 9054245958

NURSE, ANETTE
75 RIMROCK CRES
LOT 23 **BLK. 15**
WHITBY, ON TBA

TEL# (905) 424-5958 BUS#

QTY	LOC	MODEL #	SERIAL #	COLOUR	BRAND - DESCRIPTION
1		RF23HCEDBSR/AA		STAINLES	SAM, REBC3: REFRIGERATOR, FRENCH 3-DOOR, C
1		PCGS910SEFSS		STAINLES	23 CU.FT BM FD FRIDGE, IW DISP, COUNTER DEPTH
1		WFW75HEFW		WHITE	GEP, RAGS: RANGE, GAS, SLIDE-IN
					30 CONVECTION SLIDE IN GAS RANGE
1		MUST ADD WASHER HOSES			WHI, WAFL: WASHER, FRONT LOAD, LARGE CAPA
1		YWED75HEFW		WHITE	DUET®, 5.2 CU FT. IEC, 8 CYCLES, 1200 RPM, STAINLE
1		ZK5600AS		STAINLES	WHI, DREFL: DRYER, ELECTRIC - TO MATCH LAR
					DUET®, 7.4 CU FT., 6 CYCLES, ADVANCED MOISTURE SEN
					ZEP, HOUN: HOOD, UNDER-CABINET
					EURO DESIGN, 30W, 600CFM, 3SP, INCANDESCENT
This special order or clearance product requires a 50% deposit & is considered FINAL SALE.					
x					
CUSTOMER WILL INSTALL THERE OWN HOOD.					
Payment				AMEX	

- All products remain the property of Goemans until paid in full.
- Removal of old appliances at owner's risk and must be disconnected.
- Please refer to delivery/installation brochures for important details.
- All authorized returned products will be subject to a restocking charge.
- Interest of 18% per annum will be charged on overdue accounts.
- Upon delivery customer agrees to accept service in accordance with manufacturer's warranty.
- This sales invoice is based on delivery within 12 months from date of purchase. After 12 months (or if market conditions adversely change) Goemans reserves the right to review pricing/delivery on this order and offer our customers options to accommodate these changes. Any & all date sensitive supplier promotions are exempt from the 12 month price guarantee and must be taken by the promotional delivery deadline.

WHITE CUSTOMER COPY

PINK GOEMANS COPY

RF23HCEDBSR

22.5 cu. ft. Counter-Depth French Door Refrigerator with Cool Select Pantry™

Features

 
 
- 3-Door Counter-Depth Design
- Large Capacity – 22.5 cu. ft.
- Twin Cooling Plus System™
- ENERGY STAR® Compliant
- Ice Master Ice Maker in the Refrigerator
- CoolSelect Pantry™ with Temperature Control
- Premium External Filtered Water and Ice Dispenser
- High-Efficiency Top and Side LED Lighting
- EZ-Open Handle™ on Freezer Door
- Adjustable Shelf for Tall Oversized Items
- Two Humidity-Controlled Crispers
- Tempered Glass Spill-Proof Shelves
- Auto Pull-Out Upper Freezer Drawer
- Easy-to-Access Water Filter

Convenience


- Cool Tight Door
- Door Alarm
- Water Filter Indicator



ENERGY STAR® rated:
699 kWh/yr

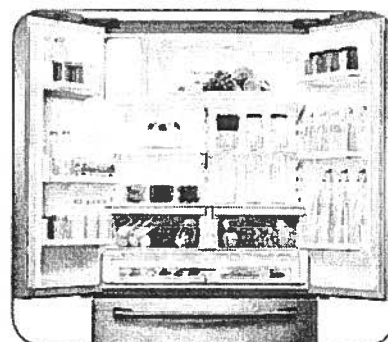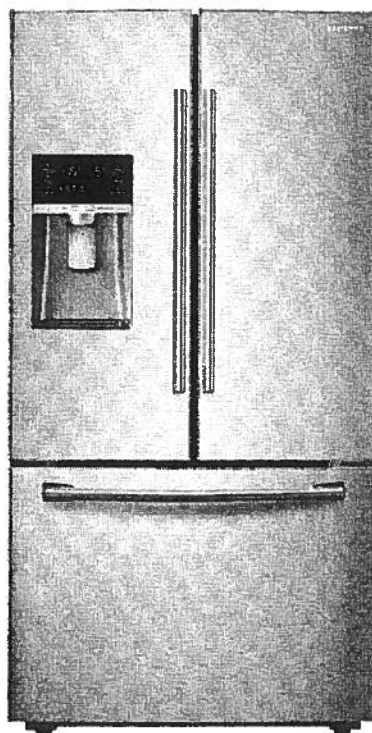

Ice Master

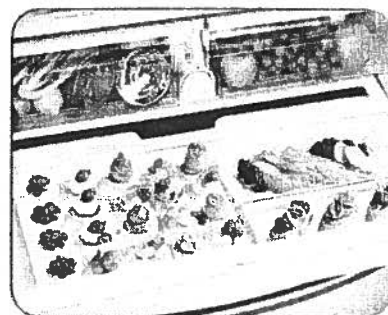 

CoolSelect Pantry™ with Temperature Control

Available Colors



Stainless Steel
(shown)



White



Black

Signature Features

SLEEK, BUILT-IN LOOK

- Stylish, counter-depth design allows for more work space in the kitchen.
- Sleek, built-in look enhances overall kitchen design.

TWIN COOLING PLUS®

- Keeps food fresher longer – Twin Cooling Plus humidity levels up to 3.6x higher than single cooling.
- Refrigerator air is kept at higher, near commercial grade humidity levels to keep perishable fruits and vegetables fresher longer.
- Drier freezer air means less freezer burn for better-tasting frozen foods.

ICE MASTER

- Our Ice Master makes 5.2 lbs. of ice per day with storage for nearly 2.7 lbs.
- Space-saving design leaves more room in the refrigerator.

COOL SELECT PANTRY™

- Provides additional temperature control for your food storage needs with Deli, Fresh and Chilled options.



**Ranked "Highest in Customer
Satisfaction with Refrigerators"**
by J.D. Power and Associates.

SAMSUNG

 
RF23HCEDBSR

22.5 cu. ft. Counter-Depth French Door Refrigerator with Cool Select Pantry™


Installing Your Refrigerator

1. Measure the height, width and depth of the opening, making sure to include baseboards, molding tile, countertop overhang, etc. Check to be sure there is enough room to open the door (consider walls, islands or other obstacles when measuring).
2. Refer to illustration below to determine dimensions.
3. Allow 2" of clearance on hinge side of refrigerator when installing next to a wall where handle may make contact.
4. Allow 1" minimum clearance at rear for proper air circulation and water/electrical connections. Allow a 3/8" minimum clearance at sides and top for ease of installation.
5. Ensure each door and entry way in the home is wide enough for the refrigerator to be moved through easily.

Please note: The following dimension and cutout information is for planning purposes only. For complete installation details consult manual packed with product, or download manual on-line at samsung.com.

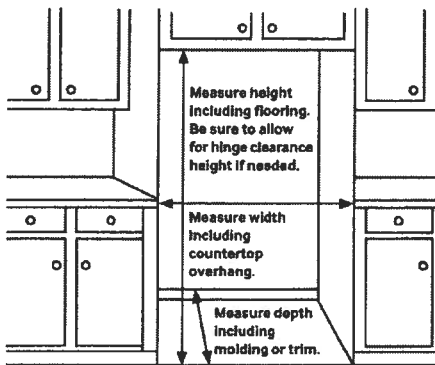

Dimensions

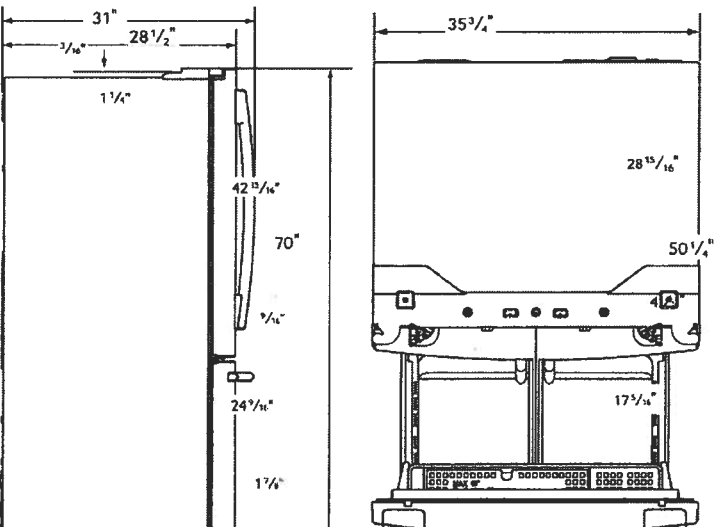 

Total Capacity: 22.5 cu. ft.

Refrigerator: 15.7 cu. ft.

- Premium External Filtered Water and Ice Dispenser
- Ice Master Ice Maker
- CoolSelect Pantry™ with Temperature Control – Deli (41°C), Fresh (38°F) and Chilled (32°F) options
- 2 Humidity-Controlled Crispers
- 5 Tempered Glass Spill-Proof Shelves
- Adjustable Shelf for Tall oversized Items
- 6 Door Bins
 - Right Door: 3 Gallon Bins
 - Left Door: 3 Regular Bins
- High-Efficiency Top and Side LED Lighting

Freezer: 6.8 cu. ft.

- EZ-Open Handle™
- 1 Drawer Divider
- High-Efficiency LED Lighting

Accessories

Water Filter: HAF-CIN

Warranty

One (1) Year All Parts and Labor
Five (5) Years Sealed System Parts and Labor
Ten (10) Years Compressor Parts Only

Product Dimensions & Weight

Dimensions (WxHxD with hinges, handles and doors):
35 3/4" x 70" x 31"

Dimensions (WxHxD without hinges and door):
35 3/4" x 68 7/8" x 24"

Dimensions (WxHxD with hinge and door, no handle):
35 3/4" x 70" x 28 1/2"

Weight: 297.62 lbs.

Shipping Dimensions & Weight (WxHxD)

Dimensions: 38 1/4" x 76 5/8" x 31 1/4"

Weight: 321.87 lbs.


Color	Model #	UPC Code
Stainless Steel	RF23HCEDBSR	887276966106
White	RF23HCEDBWW	887276967646
Black	RF23HCEDBBC	887276967660

SAMSUNG

Samsung received the highest numerical score for refrigerators in the proprietary J.D. Power and Associates 2012 Kitchen Appliance Study™. Study based on 12,615 total responses measuring 17 brands and measures opinions of consumers about their refrigerator obtained new in the past 24 months. Proprietary study results are based on experiences and perceptions of consumers surveyed in January-February 2012. Your experiences may vary. Visit jdpower.com.

Actual color may vary. Design, specifications, and color availability are subject to change without notice. Non-metric weights and measurements are approximate.

 ©2013 Samsung Electronics America, Inc. 85 Challenger Road, Ridgefield Park, NJ 07660. Tel: 800-SAMSUNG. samsung.com. Samsung is a registered trademark of Samsung Electronics Co. Ltd.

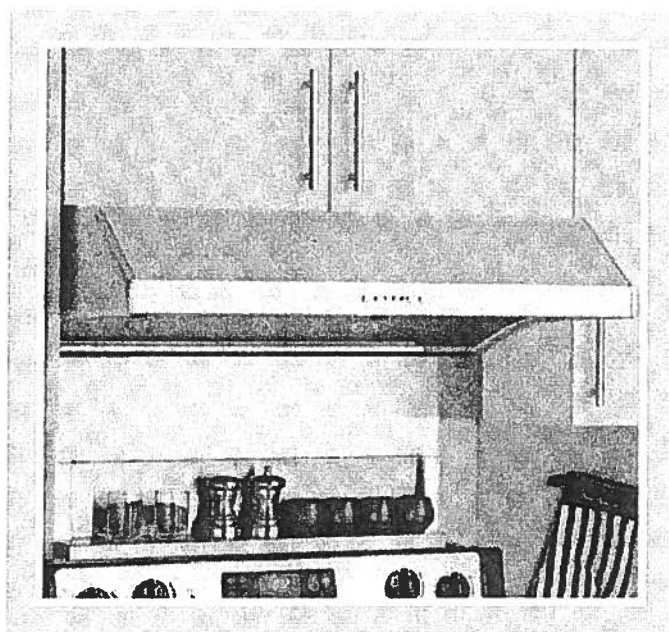


EuroDesign

ZEPHYR

UNDER
CABINET
HOOD

MODEL	ZK5600
SIZE	30"
PERFORMANCE	
Internal Blower	325 - 650 cfm
Noise Level	Up to 5 sones
COLOR	
Black, White, Stainless Steel	B, W, SS
FEATURES	
Controls	Electronic Touch
Speed Levels	3
Auto Delay-Off	No
Lighting	Halogen Lights
Dual-Level Lighting	Yes
Filters	N/A
Removable Safety Grilles	2
Recirculating	No
Duct Cover Extension	N/A
Self Cleaning	Yes
DUCT SPECIFICATIONS	
Internal Blower - Vertical	6" or 3-1/4" x 10"
Internal Blower - Horizontal	3-1/4" x 10"
AC INPUT	120V - 60Hz
AC POWER	Max. 240W - 2.12 Amps

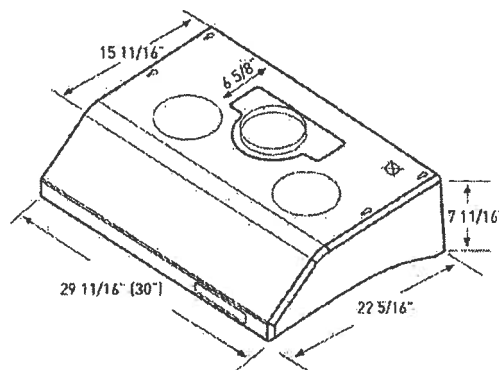 

MOUNTING HEIGHTS
Minimum height 26" from cooking surface.
Hood mounted 60" from floor.

 


Front-Loading Washer


PRODUCT MODEL NUMBERS

WFW7590F, WFW75HEF, WFW90HEF,
WFW92HEF

Washer Dimensions:

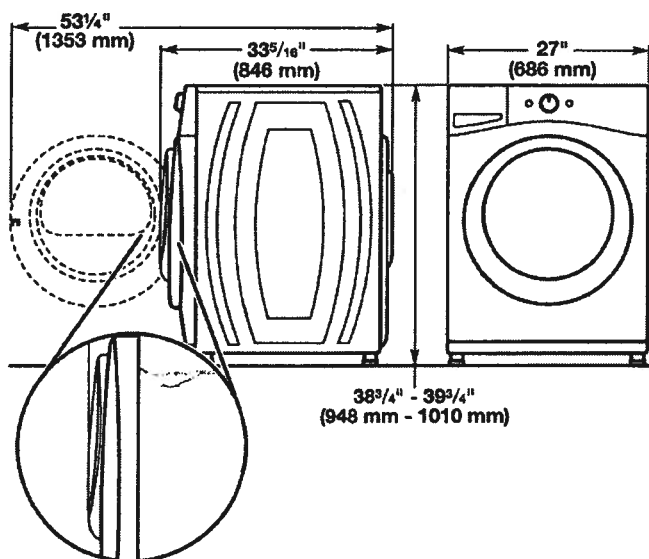

 Recessed or closet installation -
stacked washer and dryer

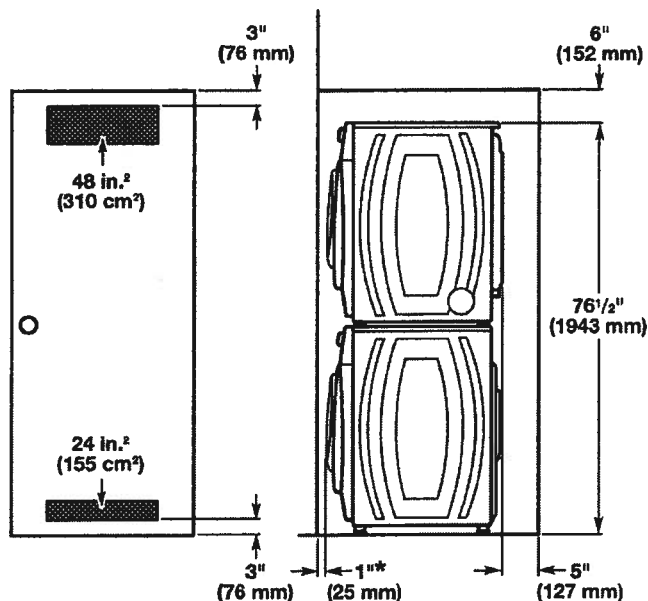


* Add spacing of 1" (25 mm) on all sides of washer/dryer.


PRODUCT MODEL NUMBERS

WFW7590F, WFW9290F, WFW85HEF

 Washer Dimensions:

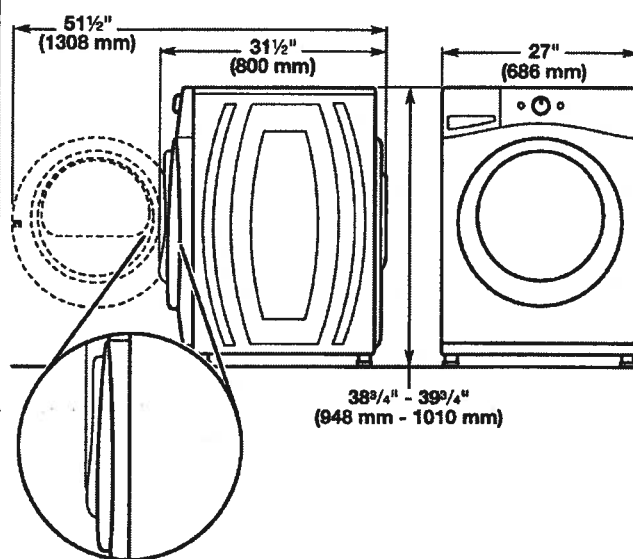


 Recessed area or closet installation (washer only):

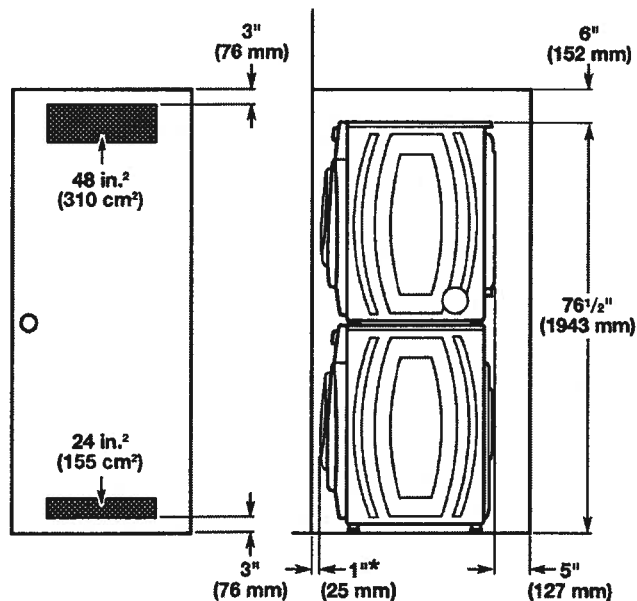


* Add spacing of 1" (25 mm) on all sides of washer.

 Custom cabinet installation (washer only):

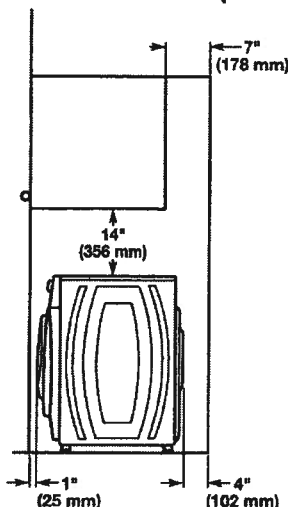

** Recommended 4" (102 mm), minimum 1.5" (38 mm)

 Undercounter installation - washer only:

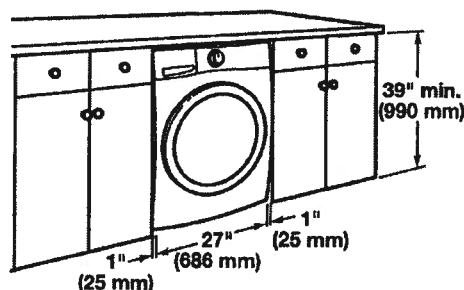

All dimensions show recommended spacing allowed, except for closet door ventilation openings which are the minimum required.

For each arrangement, consider allowing more space for ease of installation and servicing, and spacing for companion appliances and clearances for walls, doors, and floor moldings.

Space must be large enough to allow door to fully open. Add spacing of 1" (25 mm) on all sides of washer to reduce noise transfer. If a closet door or louvered door is installed, top and bottom air openings in door are required.

ELECTRICAL REQUIREMENTS

 
A 120 volt, 60 Hz., AC only, 15- or 20-amp, fused electrical supply is required. A time-delay fuse or circuit breaker is recommended. It is recommended that a separate circuit serving only this appliance be provided.

DRAIN SYSTEM

Drain system can be installed using a floor drain, wall standpipe, floor standpipe, or laundry tub. Select method you need.


IMPORTANT: To avoid siphoning, only 4.5" (114 mm) of drain hose should be inside standpipe. Always secure drain hose with cable tie.

Floor standpipe drain system

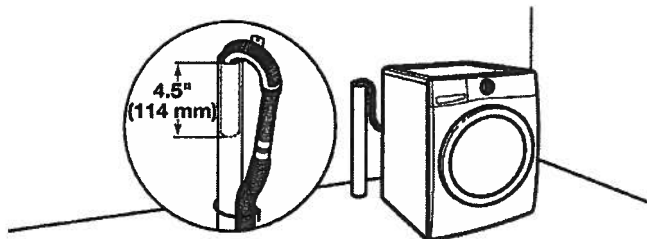


Minimum diameter for a standpipe drain: 2" (51 mm). Minimum carry-away capacity: 17 gal. (64 L) per minute. A 1/4" (6 mm) diameter to 1" (25 mm) diameter Standpipe Adapter Kit is available (Part Number 3363920). Top of standpipe must be at least 30" (762 mm) high; install no higher than 96" (2.44 m) from bottom of washer. If you have an overhead sewer and need to pump higher than 96" (2.44 m), a sump pump and associated hardware are needed. See "Alternate Parts".

 Wall standpipe drain system

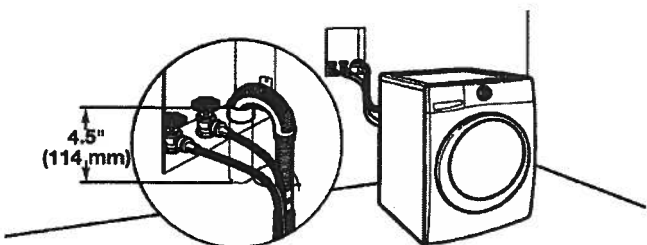


See requirements for floor standpipe drain system.

 Laundry tub drain system

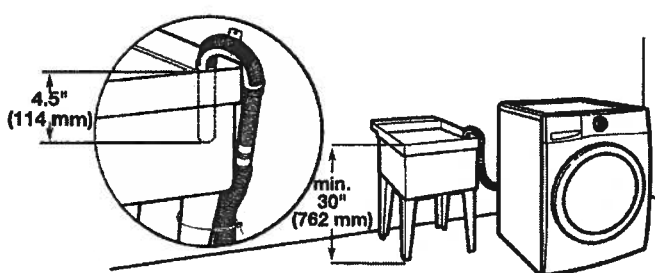


Minimum capacity: 20 gal. (76 L). Top of laundry tub must be at least 30" (762 mm) above floor; install no higher than 96" (2.44 m) from bottom of washer.

 Floor drain system

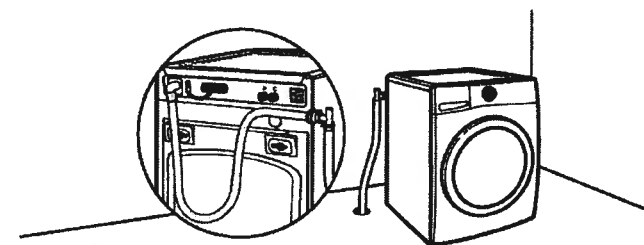

Floor drain system requires a Siphon Break Kit (Part Number 285834), 2 Connector Kits (Part Number 285835), and an Extension Drain Hose (Part Number 285863) that may be purchased separately. See "Alternate Parts". Minimum siphon break height: 28" (710 mm) from bottom of washer. (Additional hoses may be needed.)

 30" Self-Cleaning Gas Convection Range with Bake/Warm/Storage Drawer
Model #: PCGS910SEFSS

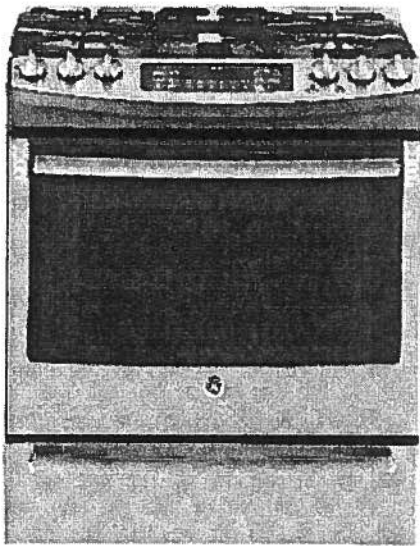

\$3,049

Approximate dimensions: 36 H x 30 W x 28 1/2 D (in.)
 Weight: 238 lbs

Features

Glass Touch Controls

Features the smooth glass design that is easy-to-operate and easy-to-clean

Non-Stick Griddle

Offers a flat cooking surface, placed over the center oval burner, for cooking multiple foods at once.
 Provides uniform heat distribution from front to back of griddle.

Accessories

LP Conversion Kit Included

Appearance

Textured Steel Side Panels	Grey	Knob Colour	Stainless
Cooktop	Deep Recessed Stainless Steel	Colour Appearance	Stainless Steel
Control Location	Upfront	Handle Style	Sculptured, Stainless Steel
Oven Door with Window	Big ClearView™		

Capacity

Main Oven	5.4	Total Oven Capacity	6.4
Lower Oven	1.0		

Features

Bumer - Right Rear	5000 BTU Precise Simmer	Bumer - Right Front	17,000 BTU
Bumer - Left Rear	9500 BTU	Bumer - Left Front	17,000 BTU
Bumer - Centre Oval	6,000 BTU	Drawer System,	Bake
		Bake/Warm/Storage	
Non-Stick Griddle	Included	Auto Oven Shut-Off With Override	Yes
Removable Baking Drawer Liner	Included	Delay Bake Option (Time Bake)	Yes
Dishwasher Safe Grates	Yes	Light Self Clean Option	Yes
Automatic Oven Light	Yes	Variable Cleaning Time	w/Delay Clean Option
C° or F° Programmable	Yes	Cooktop Grate/Bumer Cap Colour	Matte (Dull) Black

Auto Self Clean	Yes
Certified Sabbath Mode	Yes
Hidden Bake Element	Gas
Oven Cavity Colour	Black
TrueTemp™ System	Yes
Glass Touch Controls	Yes
18,000 BTU (Nat, LP)	Yes
Valves (Degree of Turn)	270
Burner Grate Type / Style	Continuous Matte Black Heavy Cast
Temperature Display	Yes
Oven Type / Cleaning	Convection Self-Clean

Electronic Clock & Timer	Yes
Variable Broil	Yes
Cooktop Surface	Stainless Steel
Fuel Type	Natural Gas
Oven Interior Light	Halogen
Audible Preheat Signal	Yes
13,500 BTU (Nat, LP)	Yes
Cooktop Burners	Sealed Burners
Ignition System	Electronic
Oven Shelves	3 Heavy Duty Self-Clean

Power & Ratings

Top Burner BTU Rating - Nat. Gas	(2) 17.0; (1) 9.5; (1) 5.0; (1) 6.0 /
/ LP (000's BTU's)	(2) 12.0; (1) 9.5; (1) 5.0; (1) 6.0

Warranty

Full 1 Year	Entire Appliance; In Home; Parts & Labour
-------------	---

Weights & Dimensions

Cooktop Width (in.)	30	Overall Width (in.)	30
Overall Height (in.)	36	Cabinet Width Required (in.)	30
Approximate Shipping Weight (lbs.)	238	Depth with Door Open (in.)	46-3/4
Overall Depth (in.)	28-1/2		

8 REPLACING THE OVEN DOOR

NOTE: The oven door is heavy. You may need help lifting the door high enough to slide it into the hinge slots. Do not fit the door by the handle.

- Let the oven door hang from the hinges. Do not fit the door by the handle.
- With the door at the same angle as in the original position (approximately 1°-2°), lift the door and slide it into the hinge slots. The handle will now be in the correct position.
- Slide the door into the hinge slots. The handle will now be in the correct position.
- Slide the door into the hinge slots. The handle will now be in the correct position.
- Slide the door into the hinge slots. The handle will now be in the correct position.

REPLACE THE STORAGE DRAWER

- Place the drawer into the oven. Push the drawer in until it stops.
- Slide the front of the drawer and push in until the drawer stops.
- Cover the front of the drawer and push in until it stops.

9 COOKTOP BURNERS

ASSEMBLE THE BURNERS

CAUTION: The burner valve is a gas valve. It is not to be used for anything other than its intended purpose. Do not use it for anything other than its intended purpose.

FOR GAS COOKTOPS:

- Place burner heads over the orifices, in the correct locations according to the diagram.
- Place burner heads over the orifices, in the correct locations according to the diagram.

FOR ELECTRIC COOKTOPS:

- Place burner heads over the orifices, in the correct locations according to the diagram.
- Place burner heads over the orifices, in the correct locations according to the diagram.

WARNING: If the burner does not light within 15 seconds, turn the knob off and wait 5 minutes before trying again.

WARNING: If the burner does not light within 15 seconds, turn the knob off and wait 5 minutes before trying again.

WARNING: If the burner does not light within 15 seconds, turn the knob off and wait 5 minutes before trying again.

9 COOKTOP BURNERS (CONT.)

ASSEMBLE THE BURNERS (CONT.)

FOR GAS COOKTOPS:

- Place burner heads over the orifices, in the correct locations according to the diagram.
- Place burner heads over the orifices, in the correct locations according to the diagram.

FOR ELECTRIC COOKTOPS:

- Place burner heads over the orifices, in the correct locations according to the diagram.
- Place burner heads over the orifices, in the correct locations according to the diagram.

WARNING: If the burner does not light within 15 seconds, turn the knob off and wait 5 minutes before trying again.

WARNING: If the burner does not light within 15 seconds, turn the knob off and wait 5 minutes before trying again.

WARNING: If the burner does not light within 15 seconds, turn the knob off and wait 5 minutes before trying again.

9 COOKTOP BURNERS (CONT.)

CHECK THE IGNITERS

WARNING: If the burner does not light within 15 seconds, turn the knob off and wait 5 minutes before trying again.

WARNING: If the burner does not light within 15 seconds, turn the knob off and wait 5 minutes before trying again.

WARNING: If the burner does not light within 15 seconds, turn the knob off and wait 5 minutes before trying again.

WARNING: If the burner does not light within 15 seconds, turn the knob off and wait 5 minutes before trying again.

WARNING: If the burner does not light within 15 seconds, turn the knob off and wait 5 minutes before trying again.

WARNING: If the burner does not light within 15 seconds, turn the knob off and wait 5 minutes before trying again.

10 BAKE AND BROIL BURNERS

CHECKING THE OVEN BURNERS

- Check the burner valve. It is a gas valve. It is not to be used for anything other than its intended purpose.
- Check the burner valve. It is a gas valve. It is not to be used for anything other than its intended purpose.
- Check the burner valve. It is a gas valve. It is not to be used for anything other than its intended purpose.
- Check the burner valve. It is a gas valve. It is not to be used for anything other than its intended purpose.
- Check the burner valve. It is a gas valve. It is not to be used for anything other than its intended purpose.

WARNING: If the burner does not light within 15 seconds, turn the knob off and wait 5 minutes before trying again.

WARNING: If the burner does not light within 15 seconds, turn the knob off and wait 5 minutes before trying again.

WARNING: If the burner does not light within 15 seconds, turn the knob off and wait 5 minutes before trying again.

10 BAKE AND BROIL BURNERS (CONT.)

ADJUST THE AIR SHUTTER

WHAT ADJUSTMENT TO MAKE:

- If the burner is yellow, open the air shutter more than the original setting.
- If the burner is blue, close the air shutter more than the original setting.

MAKING THE ADJUSTMENT:

- Remove the burner head and burner valve.
- Remove the burner head and burner valve.
- Remove the burner head and burner valve.
- Remove the burner head and burner valve.
- Remove the burner head and burner valve.

WARNING: If the burner does not light within 15 seconds, turn the knob off and wait 5 minutes before trying again.

WARNING: If the burner does not light within 15 seconds, turn the knob off and wait 5 minutes before trying again.

WARNING: If the burner does not light within 15 seconds, turn the knob off and wait 5 minutes before trying again.

10 BAKE AND BROIL BURNERS (CONT.)

FINAL INSTALLATION CHECKLIST

- Check to make sure the burner is closed (RESET) or the burner is open.
- Check to make sure the burner is closed (RESET) or the burner is open.
- Check to make sure the burner is closed (RESET) or the burner is open.
- Check to make sure the burner is closed (RESET) or the burner is open.
- Check to make sure the burner is closed (RESET) or the burner is open.

WARNING: If the burner does not light within 15 seconds, turn the knob off and wait 5 minutes before trying again.

WARNING: If the burner does not light within 15 seconds, turn the knob off and wait 5 minutes before trying again.

WARNING: If the burner does not light within 15 seconds, turn the knob off and wait 5 minutes before trying again.