



ELECTRIC COOKTOP INSTALLATION INSTRUCTIONS


Canada



INSTALLATION AND SERVICE MUST BE PERFORMED BY A QUALIFIED INSTALLER.  
IMPORTANT: SAVE FOR LOCAL ELECTRICAL INSPECTOR'S USE.  
READ AND SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.  
**⚠ WARNING** FOR YOUR SAFETY: Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.

United States



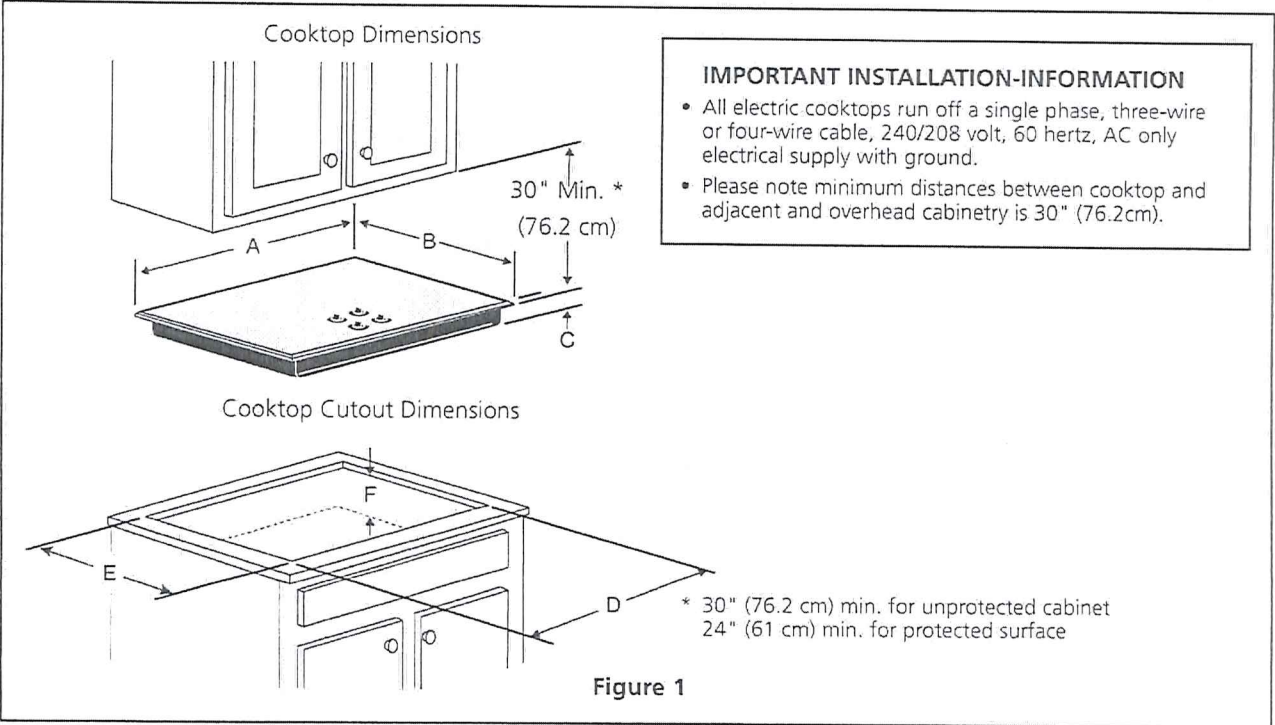

MODEL	A. LENGTH	B. WIDTH	C. DEPTH	CUTOUT DIMENSIONS				F. DEPTH BELOW COOKTOP*
				D. LENGTH		E. WIDTH		
				MIN.	MAX.	MIN.	MAX.	
24" Ceramic Glass	24 (61.0)	21 <sup>3</sup> / <sub>8</sub> (54.4)	2 <sup>5</sup> / <sub>8</sub> (6.7)	23 (58.5)	23 <sup>1</sup> / <sub>4</sub> (59.0)	20 <sup>1</sup> / <sub>4</sub> (51.4)	20 <sup>1</sup> / <sub>2</sub> (52.1)	5 (12.7)
26" Coil Elements	25 <sup>3</sup> / <sub>4</sub> (65.4)	21 <sup>9</sup> / <sub>16</sub> (54.8)	3 <sup>1</sup> / <sub>2</sub> (8.9)	25 (63.5)	25 (63.5)	20 <sup>1</sup> / <sub>2</sub> (52.1)	20 <sup>1</sup> / <sub>2</sub> (52.1)	5 <sup>1</sup> / <sub>2</sub> (14)
30" Ceramic Glass	30 <sup>3</sup> / <sub>8</sub> (77.8)	21 <sup>3</sup> / <sub>8</sub> (54.4)	2 <sup>5</sup> / <sub>8</sub> (6.7)	29 <sup>5</sup> / <sub>8</sub> (75.2)	29 <sup>7</sup> / <sub>8</sub> (75.9)	20 <sup>1</sup> / <sub>4</sub> (51.4)	20 <sup>1</sup> / <sub>2</sub> (52.1)	5 (12.7)
30" Coil Elements	30 (76.2)	21 <sup>1</sup> / <sub>2</sub> (54.6)	3 (7.6)	26 <sup>3</sup> / <sub>4</sub> (67.9)	28 <sup>1</sup> / <sub>4</sub> (71.8)	19 <sup>1</sup> / <sub>8</sub> (48.6)	20 (50.8)	5 (12.7)
32" Ceramic Glass	32 <sup>1</sup> / <sub>4</sub> (81.9)	20 <sup>1</sup> / <sub>4</sub> (51.4)	3 <sup>3</sup> / <sub>4</sub> (9.5)	31 (78.7)	31 <sup>1</sup> / <sub>4</sub> (79.4)	19 (48.3)	19 <sup>1</sup> / <sub>4</sub> (48.9)	5 <sup>3</sup> / <sub>4</sub> (14.6)
32" Coil Elements	32 <sup>1</sup> / <sub>4</sub> (81.9)	20 <sup>1</sup> / <sub>4</sub> (51.4)	3 <sup>3</sup> / <sub>4</sub> (9.5)	31 (78.7)	31 <sup>1</sup> / <sub>4</sub> (79.4)	19 (48.3)	19 <sup>1</sup> / <sub>4</sub> (48.9)	5 <sup>3</sup> / <sub>4</sub> (14.6)
36" Ceramic Glass	36 <sup>3</sup> / <sub>4</sub> (93.5)	21 <sup>3</sup> / <sub>8</sub> (54.4)	2 <sup>5</sup> / <sub>8</sub> (6.7)	35 <sup>5</sup> / <sub>8</sub> (90.5)	36 <sup>1</sup> / <sub>8</sub> (91.8)	20 <sup>1</sup> / <sub>4</sub> (51.4)	20 <sup>1</sup> / <sub>2</sub> (52.1)	5 (12.7)
36" Coil Elements (36" X 18")	36 (91.4)	18 (45.7)	3 <sup>7</sup> / <sub>8</sub> (9.8)	34 <sup>1</sup> / <sub>4</sub> (87)	34 <sup>3</sup> / <sub>8</sub> (87.3)	16 <sup>5</sup> / <sub>8</sub> (42.2)	16 <sup>3</sup> / <sub>4</sub> (42.5)	5 <sup>7</sup> / <sub>8</sub> (14.9)
36" Coil Elements (36" x 21 <sup>1</sup> / <sub>2</sub> " )	36 (91.4)	21 <sup>1</sup> / <sub>2</sub> (54.6)	3 (7.6)	32 <sup>3</sup> / <sub>4</sub> (83.2)	34 <sup>1</sup> / <sub>4</sub> (87)	19 (48.3)	20 (50.8)	5 (12.7)

All dimensions are in inches (cm).  
Only some models are available in Canada.  
\* Allow 2" (5 cm) space below cooktop to clear the electric cable and allow for installation of the junction box on the wall at the back of the cooktop.


P/N 318205403 (0904) Rev. C  
English – pages 1-8  
Español – pages 9-16  
Français – pages 17-24

Printed in China

I'm buying the 36" Ceramic glass cooktop

Lot# 57  
Crosswinds

ELECTRIC COOKTOP INSTALLATION INSTRUCTIONS

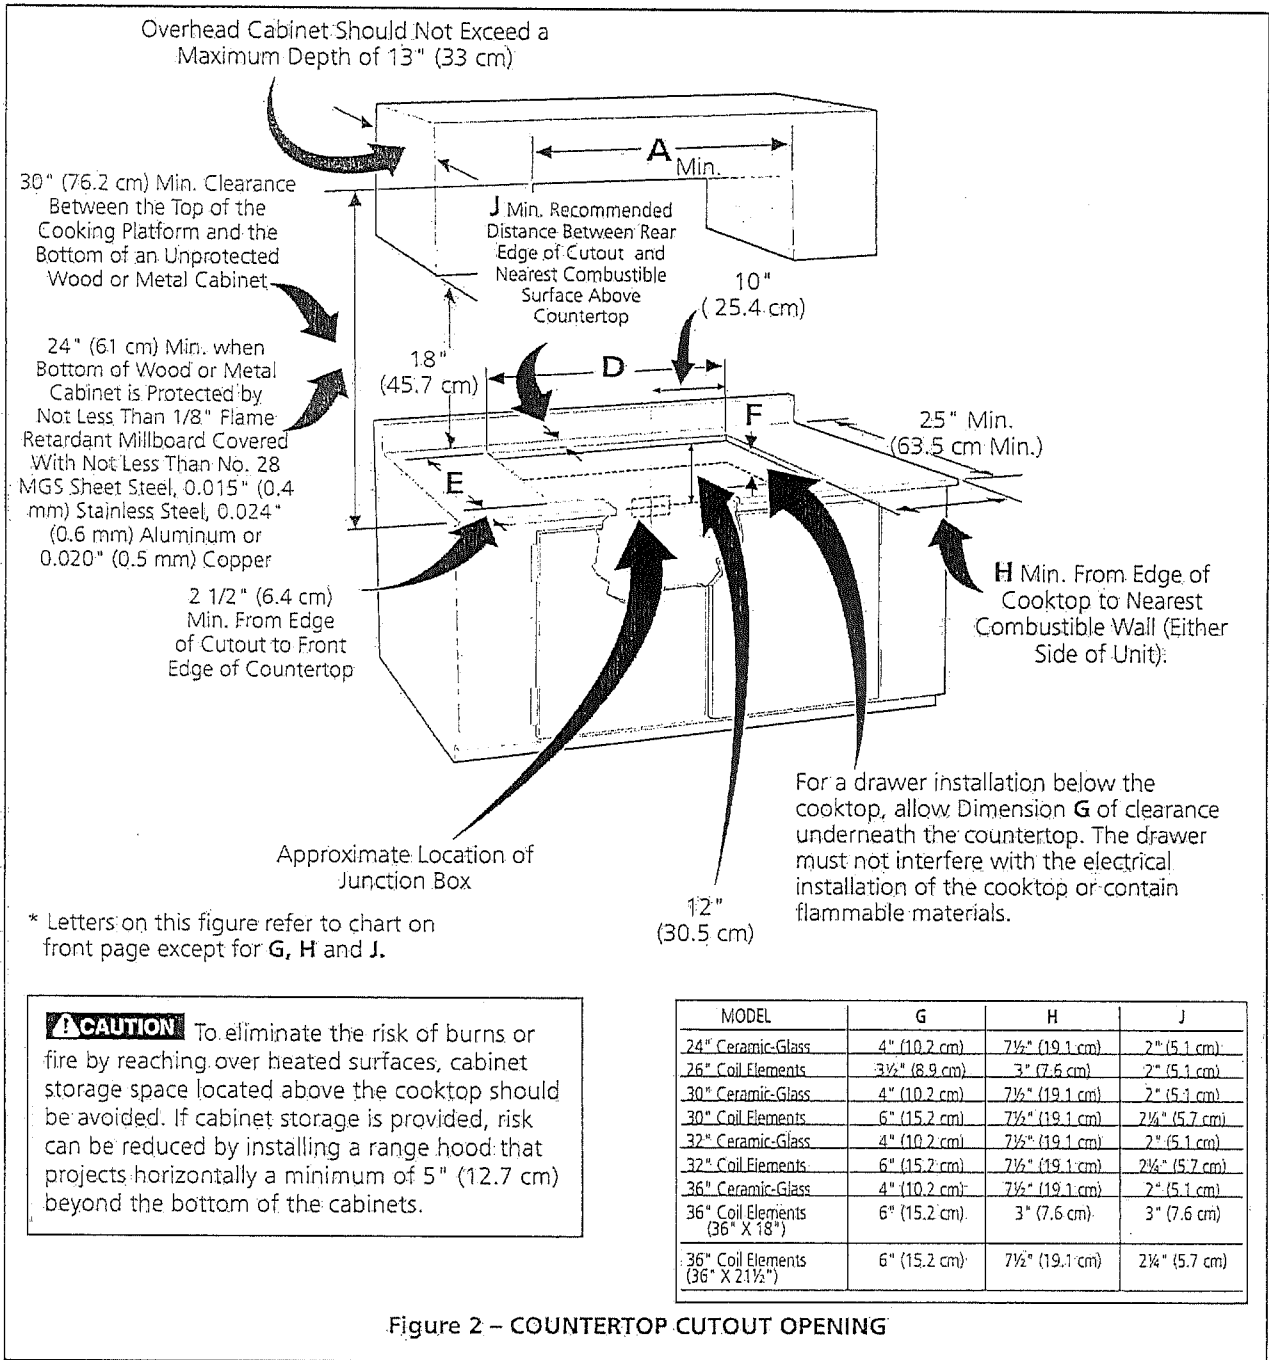

Important Notes to the Installer

- 1. Read all instructions contained in these installation instructions before installing the cooktop.
- 2. Remove all packing material before connecting the electrical supply to the cooktop.
- 3. Observe all governing codes and ordinances.
- 4. Be sure to leave these instructions with the consumer.

Important Note to the Consumer

Keep these instructions with your owner's guide for future reference.

LOT#57  
Crosswinds



MICROWAVE/ WALL OVEN COMBINATION  
INSTALLATION INSTRUCTIONS

INSTALLATION AND SERVICE MUST BE PERFORMED BY A QUALIFIED INSTALLER.  
IMPORTANT: SAVE FOR LOCAL ELECTRICAL INSPECTOR'S USE.  
READ AND SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.

United States  
and Canada



**⚠ WARNING** FOR YOUR SAFETY: Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.

Your new wall oven has been designed to fit a limited variety of cutout sizes to make the job of installing easier. The first step of your installation should be to measure your current cutout dimensions and compare them to the cutout dimensions chart below for your model. You may find little or no cabinet work is necessary.

**⚠ WARNING** Do not remove spacers (if equipped) on the side walls and/or on the back of the built-in oven. These spacers center the oven in the space provided. The oven must be centered to prevent excess heat buildup that may result in heat damage or fire.

NOTES:

- 1. Base must be capable of supporting 225 pounds (102 kg).
- 2. Allow at least 21" (53.3cm) clearance in front of oven for door depth when it is open.
- 3. Dimension G (cutout depth) is critical to the proper installation of the built-in oven. If the oven decorative trim does not butt against the cabinet verify dimension G to assure it is the required depth.

\* Suggested distance from floor is 11½" (29.2 cm).  
Minimum required distance is 4 ½" (11.4 cm)

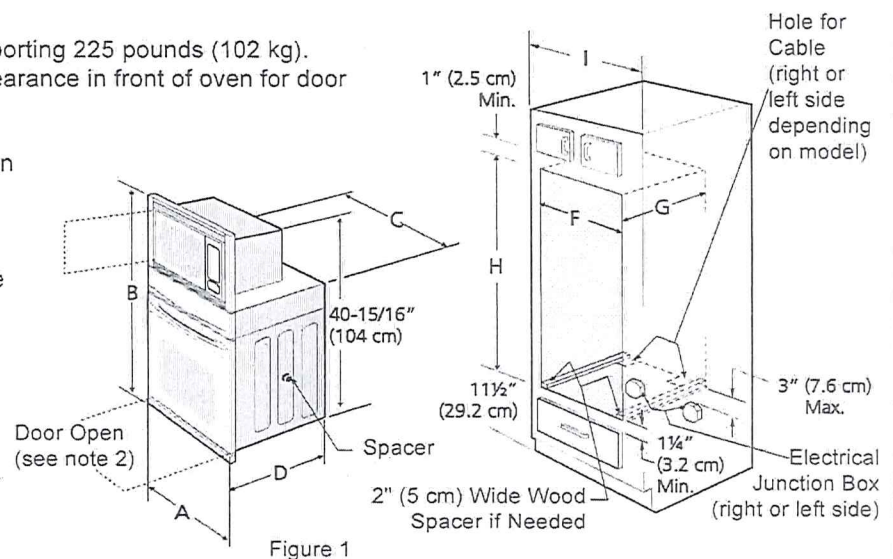


Figure 1

PRODUCT DIMENSIONS						
MODEL	A		B	C		D
27" (68.6cm) Wall Oven	27 (68.6)		42¾ (108.6)	24⅝ (62.5)		24¾ (62.9)
30" (76.2cm) Wall Oven	30 (76.2)		42¾ (108.6)	28¾ (71.8)		24¾ (62.9)
CUTOUT DIMENSIONS AND CABINET WIDTH						
MODEL	F		G. Min.	H		I
	Min.	Max.		Min.	Max.	
27" (68.6cm) Wall Oven	24⅞ (63.2)	25¼ (64.1)	23¾ (60.3)	41⅞ (104.5)	41¼ (104.8)	27⅞ (68.9) Min
30" (76.2cm) Wall Oven	28½ (72.4)	29 (73.7)	23¾ (60.3)	41⅞ (104.5)	41¼ (104.8)	30⅞ (76.5) Min

All dimensions are stated in inches and (cm).

Printed in USA

P/N 807611001 (1304) Rev. A  
English – pages 1-6  
Español – páginas 7-12  
Français – pages 3-19

Im buying the 30" microwave/wall oven

LOT# 57

Crosswinds

MICROWAVE/ WALL OVEN COMBINATION  
INSTALLATION INSTRUCTIONS

Important Notes to the Installer

- 1. Read all instructions contained in these installation instructions before installing the combination oven.
- 2. Remove all packing material from the oven compartments before connecting the electrical supply to the wall oven.
- 3. Observe all governing codes and ordinances.
- 4. Be sure to leave these instructions with the consumer.
- 5. Oven door may be removed to facilitate installation.
- 6. THIS COMBINATION OVEN IS NOT APPROVED FOR STACKABLE OR SIDE-BY-SIDE INSTALLATION.

Important Note to the Consumer

Keep these instructions with your Owner's Guide for future reference. Do not discard oven removal tools found in the literature bag.

IMPORTANT SAFETY  
INSTRUCTIONS

- Be sure your combination oven is installed and grounded properly by a qualified installer or service technician.
- This wall oven must be electrically grounded in accordance with local codes or, in their absence, with the National Electrical Code ANSI/NFPA No. 70- latest edition in United States, or with CSA Standard C22.1, Canadian Electrical Code, Part 1, in Canada.

**⚠ WARNING** Stepping, leaning or sitting on the door of this wall oven can result in serious injuries and can also cause damage to the wall oven.

- Never use your wall oven for warming or heating the room. Prolonged use of the wall oven without adequate ventilation can be dangerous.

**⚠ WARNING** The electrical power to the oven must be shut off while line connections are being made. Failure to do so could result in serious injury or death.

1. Carpentry

Refer to figure 1 for the dimensions applicable to your appliance, and the space necessary to receive the combination oven. The oven support surface may be solid plywood or similar material, however the surface must be leveled from side to side and from front to rear.

2. Electrical Requirements

This appliance must be supplied with the proper voltage and frequency, and connected to an individual, properly grounded branch circuit, protected by a circuit breaker or fuse. To know the circuit breaker or fuse required by your model, see the serial plate to find the wattage consumption and refer to table A to get the circuit breaker or fuse amperage. Observe all governing codes and local ordinances

Appliance Rating Watts 240V	Protection Circuit Recommended	Appliance Rating Watts 208V	Protection Circuit Recommended
Less than 4800W	20A	Less than 4100W	20A
4801W - 7200W	30A	4101W - 6200W	30A
7201W - 9600W	40A or 50A	6201W - 8300W	40A or 50A
9601W and +	50A	8301W and +	50A

Table A

1. A 3-wire or 4-wire single phase 120/240 or 120/208 Volt, 60 Hz AC only electrical supply is required on a separate circuit fused on both sides of the line (red and black wires). A time-delay fuse or circuit breaker is recommended. DO NOT fuse neutral (white wire). Only certain cooktop models may be installed over certain built-in electric oven models. Approved cooktops and built-in ovens are listed by the MFG ID number (see the insert sheet included in the literature package).

NOTE: Wire sizes and connections must conform with the fuse size and rating of the appliance in accordance with the American National Electrical Code ANSI/NFPA No. 70- latest edition, or with Canadian CSA Standard C22.1, Canadian Electrical Code, Part 1, and local codes and ordinances.

**⚠ WARNING** An extension cord should not be used with this appliance. Such use may result in a fire, electrical shock, or other personal injury. If you need a longer power cord you can purchase a 10' (3 m) power cord kit #903056-9010 by calling the Service Center.

2. These appliances should be connected to the fused disconnect (or circuit breaker) box through flexible armored or nonmetallic sheathed cable. The flexible armored cable extending from the appliance should be connected directly to the junction box. The junction box should be located as shown in Figure 1 or Figure 2 and with as much slack as possible remaining in the cable between the box and the appliance, so it can be moved if servicing is ever necessary.
3. A suitable strain relief must be provided to attach the flexible armored cable to the junction box.

LOT# 57  
Crosswinds