


ALLURAVISION™ 42 SLIMLINE

NEFL42CHS – LINEAR ELECTRIC FIREPLACE

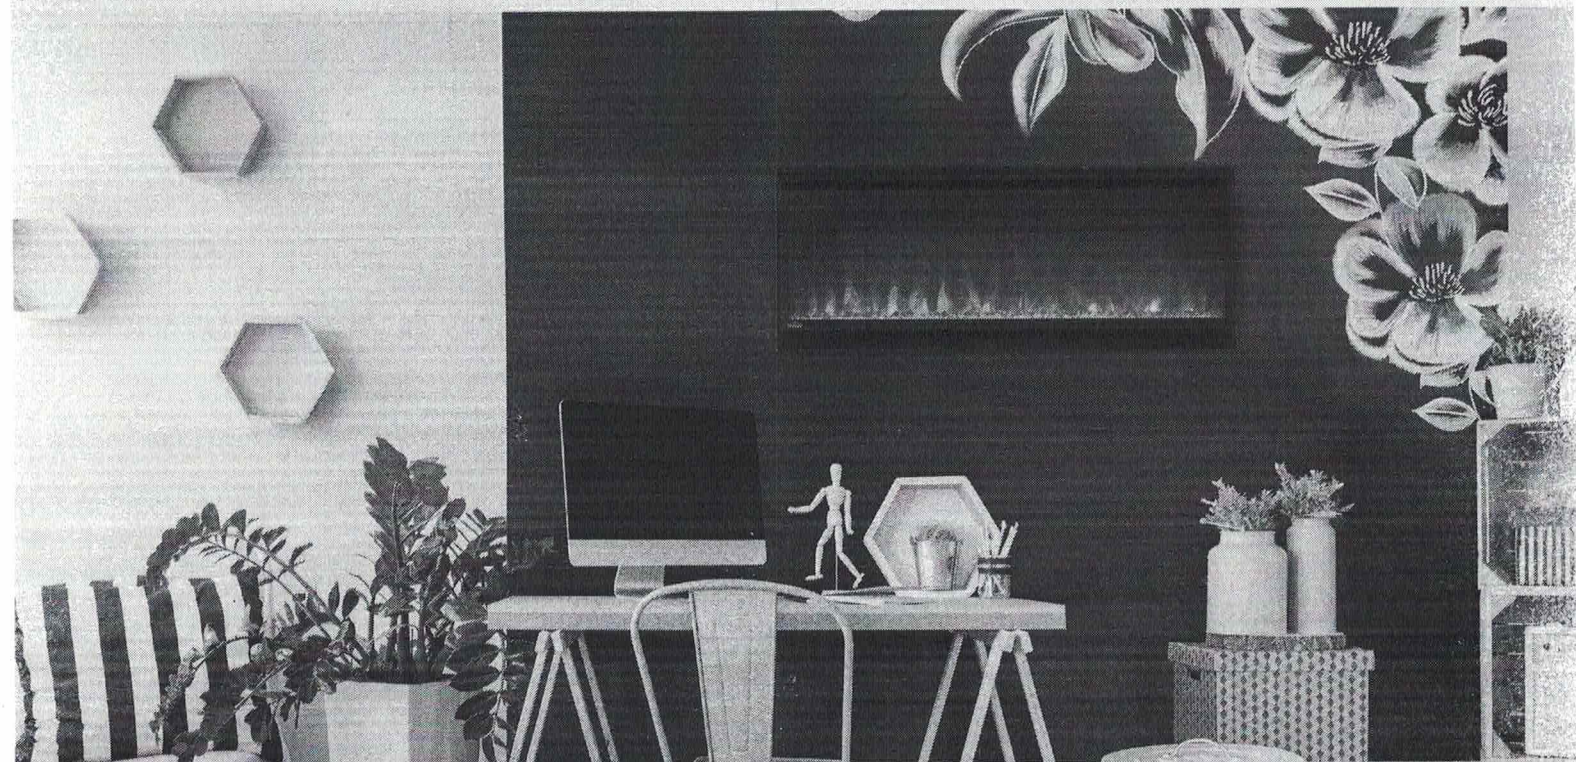

FEATURES

- 17 5/16"H X 42 1/16"W X 4 1/4"D
- UP TO 5,000 BTU'S
- 1,500 WATTS
- HIGH INTENSITY LED LIGHTS WITH SOFT START & STOP
- WHISPER QUIET BLOWER WITH BOOST FUNCTION
- Warms up to 400 sq. ft.
- Fully recess into the wall or easily hang on the wall with a built-in bracket
- Simply plugs into a 120V wall outlet or can be hard wired
- Four flame color options, four flame brightness options, five different flame speeds and six ember bed color options

OPTIONS / ACCESSORIES



FLAME COLOR OPTIONS



EMBER BED COLOR OPTIONS




REMOTE CONTROL

ALLURAVISION™ SERIES ELECTRIC FIREPLACE



Specifications

Model	BTU	Width		Height		Depth		Viewing Area
		Actual	Framing	Actual	Framing	Actual	Framing	
NEFL42CHD	5000 / 9000	44 7/16	42 9/16	17 5/16	16 1/8	5 13/16	6 1/16	40 1/4 x 11 1/16
NEFL50CHD		52 11/16	50 13/16					48 1/2 x 11 1/16
NEFL60CHD		62 9/16	60 11/16					58 5/16 x 11 1/16
NEFL74CHD		76 3/4	74 13/16					72 1/2 x 11 1/16
NEFL100CHD		102 11/16	100 13/16					98 1/2 x 11 1/16
NEFL42CHS	5000	44 7/16	42 9/16	17 5/16	16 1/8	4 1/4	4 1/2	40 1/4 x 11 1/16
NEFL50CHS		52 11/16	50 13/16					48 1/2 x 11 1/16
NEFL60CHS		62 9/16	60 11/16					58 5/16 x 11 1/16
NEFL74CHS		76 3/4	74 13/16					72 1/2 x 11 1/16

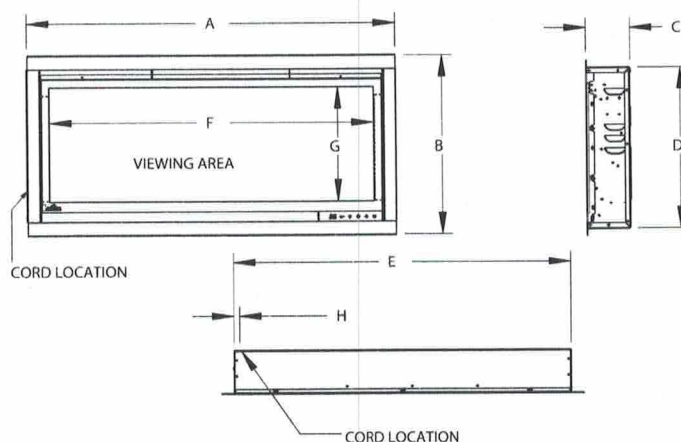

Dimensions								
Model No.	A	B	C	D	E	F	G	H
NEFL42CHS	44 7/16" (112.8cm)	17 5/16" (44cm)	4 1/4" (10.8cm)	15 7/8" (40.2cm)	42 1/16" (106.8cm)	40 1/4" (102.2cm)	11 1/16" (28.1cm)	3/4" (1.8cm)
NEFL50CHS	52 11/16" (133.8cm)				50 5/16" (127.8cm)	48 1/2" (123.2cm)		
NEFL60CHS	62 9/16" (158.8cm)				60 3/16" (152.8cm)	58 5/16" (148.2cm)		
NEFL74CHS	76 3/4" (194.8cm)				74 5/16" (188.8cm)	72 1/2" (184.2cm)		
NEFL42CHD	44 7/16" (112.8cm)	17 5/16" (44cm)	5 13/16" (14.8cm)	15 7/8" (40.2cm)	42 1/16" (106.8cm)	40 1/4" (102.2cm)	11 1/16" (28.1cm)	3/4" (1.8cm)
NEFL50CHD	52 11/16" (133.8cm)				50 5/16" (127.8cm)	48 1/2" (123.2cm)		
NEFL60CHD	62 9/16" (158.8cm)				60 3/16" (152.8cm)	58 5/16" (148.2cm)		
NEFL74CHD	76 3/4" (194.8cm)				74 5/16" (188.8cm)	72 1/2" (184.2cm)		
NEFL100CHD	102 11/16" (260.8cm)				100 5/16" (254.8cm)	98 1/2" (250.2cm)		

Product information provided is not complete and is subject to change without notice. Please consult the installation manual for the most up to date installation information.

W415-1908 / A / 08.08.19


ALLURAVISION™ SERIES ELECTRIC FIREPLACE

NAPOLÉON

Clearances Minimum Mantel Clearances

WARNING

- When using paint or lacquer to finish the mantel, the paint or lacquer must be heat resistant to prevent discolouration.

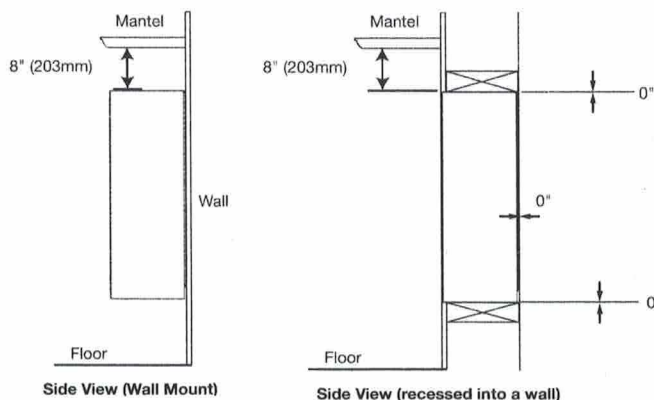

Side View (Wall Mount)


Side View (recessed into a wall)

Framing

Measurements from body of appliance:

Sides, Back, Top 0"

FINISHING MATERIAL

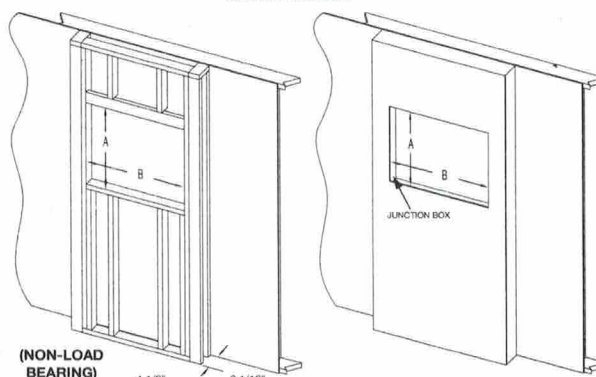

Model No.	A	B
NEFL42CHS	42 9/16" (108.1cm)	16 1/8" (41cm)
NEFL50CHS	50 13/16" (129.1cm)	16 1/8" (41cm)
NEFL60CHS	60 11/16" (154.1cm)	16 1/8" (41cm)
NEFL74CHS	74 13/16" (190cm)	16 1/8" (41cm)

Model No.	A	B
NEFL42CHD	42 9/16" (108.1cm)	16 1/8" (41cm)
NEFL50CHD	50 13/16" (129.1cm)	16 1/8" (41cm)
NEFL60CHD	60 11/16" (154.1cm)	16 1/8" (41cm)
NEFL74CHD	74 13/16" (190cm)	16 1/8" (41cm)
NEFL100CHD	100 13/16" (256.1cm)	16 1/8" (41cm)

Appliance Installation

Side Panel Installation (Wall Mount Installation Only)

- Install left and right panels (FIG. 1) by securing 4 fasteners (2 per panel) to bottom of appliance (FIG. 2).

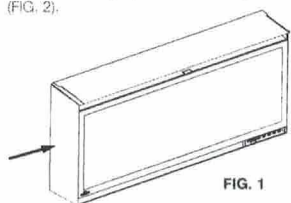


FIG. 1

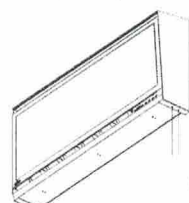


FIG. 2

Recessing the Appliance into the Wall

Due to the many different materials used on different walls, it is highly recommended that you consult your local builder before you install this appliance on the wall.

Select a location that is not prone to moisture and is located at least 36" (91.4cm) away from combustible materials such as curtain drapes, furniture, bedding, paper etc.

- Measure the appliance and create a rough in with electrical. The electrical junction box is located on the left side of the appliance.
- Remove the front glass (see "front glass installation and removal" section in your manual).
- Remove the plastic panel holders by removing the screws (FIG. 1 and 2).



FIG. 1

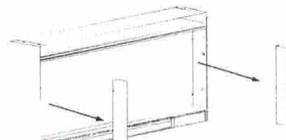


FIG. 2

- If side covers are installed prior to recessed installation, remove the side covers by removing the screws (FIG. 3 and 4).

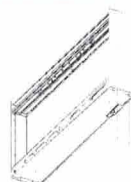


FIG. 3

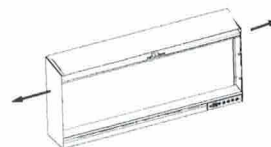


FIG. 4

- Install trims (see "trim installation" section in your manual).
- Hold the appliance up to ensure it will fit into the framing (see "framing - recessed installation" section in your manual).
- Apply shims (not supplied) between the appliance and the frame.
- Use 4 screws to secure the appliance into the wall (FIG. 5). Do not overtighten screws.

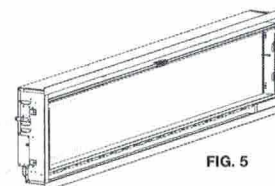


FIG. 5

- Re-install the plastic panel holders.
- Place the crystals or optional topaz glass chips and drift wood logs (CHD models only) along the media tray (see "crystal ember installation" and "optional topaz glass chips and drift wood log installation" sections in your manual).
- Install front glass (see "front glass installation and removal" section in your manual).

note:

2 sets of holes are provided for recessing into the wall. The wall structure may limit how far the appliance can be recessed. Use the appropriate set of holes when recessing to the frame. Apply shims (not supplied) between appliance and frame.

It is recommended that the walls of the appliance enclosure be finishing (i.e. drywall) to avoid exposed insulation or vapour barrier coming in contact with the appliance. This will ensure clearance to combustibles is maintained.