 

ALITO COLLECTION


Cyclone



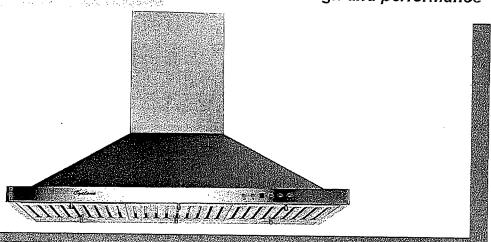

### **WALL MOUNT**

Sometimes strength and beauty can co-exist. Strong and sturdy, yet attractive and unimposing, the SC500 combines the eye-pleasing design of European hoods with the power and efficiency of North American fans. A perfect match. Give your kitchen the look, feel, and capability that you have always wanted. Fitted with time-delay "OFF" options up to nine minutes, bright halogen lights spaced for optimum light distribution, stainless steel baffle filters, and a digital three-speed push button control panel.

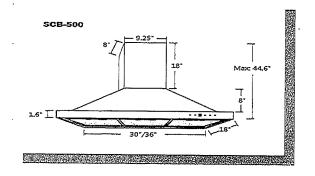

Air Flow Volume: 550 CFM Electrical Connection: 120V/60Hz Electrical Consumption:


200 watts Fan Speed: 1254 RPM

Finishes: Stainless Steel Venting: 6" Round (Top Only)

Dimensions: W:30"/36" H:44.6" D:18" Sones: Min. at 1.5 and Max. at 6

Model #	Colour	Venting	Size
SCB50030	Stainless Steel	6"	30"
_SCB50036	Stainless-Steel	6"	36"

 Cyclone Range Hoods Inc. 110 Silver Star Blvd., Unit#105 Toronto; ON M1V 5A2 CANADA Tel: 416.293.0933 Fax: 416.293.4793 Toll Free: 1.888.293.5662 Website: www.cyclonerangehoods.com



WELCOME TO THE NEW COAST APPLIANCES WEBSITE (http://www.coastappliances.com) | WELCOME TO THE NEW COAST APPLIANCES WEBSITE (http://ww

PRODUCTS~(http:///inan.wn/tolas/thtpp://kishnasas.idoma/saspinaligisn/babbi/obsess/stansaspinaliasiasiaspinaliasiasiaspinaliasiaspinaliasiasiaspinaliasiaspinaliasiaspinaliasiaspinaliasiaspinaliaspinaliasiaspinaliaspina

CAREERS (http://www.coastappliances.com/pages/careers) ONLINE PAYMENTS (http://www.coastappliances.com/pages/for\_home\_owners\_online\_payment) HELPFUL ARTICLES (http://www.coastappliances.com/pages/for\_home\_owners\_helpful\_articles)



KEYWORDS, MODEL#

CHANGE LOCATION

VAUGHAN

Q SEARCH (/products/searchresults)

\$\ 905-856-0007 (tel:905-856-0007)

iotions)

BRANDS YOU WANT, EXPERTISE YOU NEED

OVER 35 YEARS OF SERVICE

ment)

Home (http://www.coastappliances.com/) / Cooking (/categories/category\_view/21) / Cooktops (/categories/category\_view/49) / Gas Cooktops (/products/category\_products/gas-cooktops) / 30° Frigidaire Gallery Gas Cooktop - FGGC3047QS (s/appliancesforbuilders)

30" Frigidaire Gallery Gas Cooktop - FGGC3047QS

FGGC3047QS

(/products/view/Frigidaire-Gallery-30-39-39-Gas-Cooktop-FGGC3047QB) (/products/view/Frigidaire-Gallery-30-39-39-Gas-Cooktop-FGGC3047QW)

(http://www.coastappliances.com/webroot/files/image/attachmen95984)-RUG15-Qs2.png)



### Resources

(/Files/Pdf/Attachment/19948/Installation\_Instructions.pdf)

Owners Guide (/Files/Pdf/Attachment/19949/Owners\_Guide.pdf)

Specifications Sheet (/Files/Pdf/Attachment/19950/Specifications\_Sheet.pdf)

Wiring Diagram (/Files/Pdf/Attachment/19951/Wiring Diagram.pdf)

Why Should I buy from Coast?

DESCRIPTION

**Technical Specifications** 

FEATURES

TECH SPECS

Show measurements in : Inch

Manufacturer	Frigidaire
Product Height	5
Product Width	30
Product Depth	21.75
Product Weight	205

Specifications are for planning purposes only and may change without notice. Please refer to manufacturer manuals for all details.



### **GAS COOKTOP INSTALLATION INSTRUCTIONS**

(For 30" & 36" Models)



# INSTALLATION AND SERVICE MUST BE PERFORMED BY A QUALIFIED INSTALLER. IMPORTANT: SAVE FOR LOCAL ELECTRICAL INSPECTOR'S USE. READ AND SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.



**! WARNING** If the information in this manual is not followed exactly, a fire or explosion may result causing property damage, personal injury or death.


### FOR YOUR SAFETY:

- Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.
- WHAT TO DO IF YOU SMELL GAS:
- Do not try to light any appliance.
- Do not touch any electrical switch; do not use any phone in your building.
- Immediately call your gas supplier from a neighbor's phone.
   Follow the gas supplier's instructions.
- If you cannot reach your gas supplier, call the fire department.
- Installation and service must be performed by a qualified installer, service agency or the gas supplier.

## Appliances Installed in the state of Massachusetts:

This Appliance can only be installed in the state of Massachusetts by a Massachusetts licensed plumber or gas fitter. This appliance must be installed with a three (3) foot / 36 in. long flexible gas connector.

A "T" handle type manual gas valve must be installed in the gas supply line to this appliance.

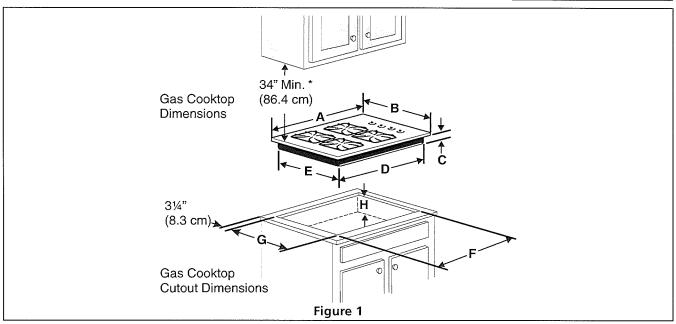

		PRODUCT DI	MENSIONS		
MODEL	A. WIDTH	B. DEPTH	C. HEIGHT	D. BOX WIDTH	E. BOX DEPTH
30" Gas Cooktop	30 (76.2)	21 ¾ (55.2)	4 ¼ (10.8)	28 (71.1)	19 ³/ <sub>8</sub> (49.2)
36" Gas Cooktop	36 (91.4)	21 ¾ (55.2)	4 ¼ (10.8)	33 <sup>5</sup> / <sub>8</sub> (85.4)	19 (48.3)
		CUTOUT DI	MENSIONS		
	F. Wi	IDTH	G.	DEPTH	H. HEIGHT BELOW
MODEL	MINIMUM	MAXIMUM	MINIMUM	MAXIMUM	COOKTOP
30" Gas Cooktop	28 ¼ (71.8)	28 5/8 (72.7)	19 ³/ <sub>8</sub> (49.2)	19 ¾ (50.2)	8 (20.3)
36" Gas Cooktop	33 <sup>7</sup> / <sub>8</sub> (86)	34 ¼ (87)	19 <sup>3</sup> / <sub>8</sub> (49.2)	19 ¾ (50.2)	8 (20.3)

All dimensions are stated in inches and (cm).

Dimension H includes a 5" (12.7 cm) space underneath the cooktop for connection to gas supply line.

**NOTE:** Wiring diagrams for this cooktop are enclosed in this booklet Printed in China

A01705101 (1406) Rev. A

English - pages 1-9

Español - páginas 10-18

Français - pages 19-26

Wiring Diagram 27-28

### GAS COOKTOP INSTALLATION INSTRUCTIONS

(For 30" & 36" Models)

### Important Notes to the Installer

- 1. Read all instructions contained in these installation instructions before installing the cooktop.
- 2. Remove all packing material before connecting the electrical supply to the cooktop.
- 3. Observe all governing codes and ordinances.
- 4. Be sure to leave these instructions with the consumer.
- 5. Note: For operation at 2000 ft. elevations above see level, appliance rating shall be reduced by 4 percent for each additional 1000 ft.

### Important Note to the Consumer

Keep these instructions with your Use and Care Guide for future reference.

# IMPORTANT SAFETY INSTRUCTIONS

Installation of this cooktop must conform with local codes or, in the absence of local codes, with the National Fuel Gas Code ANSI Z223.1/NFPA 54 in the United States, or in Canada, with the Canadian Fuel Gas Code, CAN/CGA B149 and CAN/CGA B149.2.

 When installed in a manufactured (mobile) home installation must conform with the Manufactured Home Construction and Safety Standard, title 24 CFR, part 3280 [Formerly the Federal Standard for Mobile Home Construction and Safety, title 24, HUD (part 280)] or, when such standard is not applicable, the Standard for Manufactured Home Installation, ANSI/ NCSBCS A225.1 or with local codes where applicable.

This cooktop has been design certified by CSA International. As with any appliance using gas and generating heat, there are certain safety precautions you should follow. You will find them in the <u>Use and Care Guide</u>, read it carefully.

- Be sure your cooktop is installed and grounded properly by a qualified installer or service technician.
- This cooktop must be electrically grounded in accordance with local codes or, in their absence, with the National Electrical Code ANSI/NFPA No. 70—latest edition in the United States, or in Canada, with the Canadian Electrical Code, CSA C22.1 Part 1.
- The burners can be lit manually during an electrical power outage. To light a burner, hold a lit match to the burner head, then slowly turn the Surface Control knob to LITE. Use caution when lighting burners manually.
- Do not store items of interest to children in cabinets above the cooktop. Children could be seriously burned climbing on the cooktop to reach items.
- To eliminate the need to reach over the surface burners, cabinet storage space above the burners should be avoided.
- Adjust surface burner flame size so it does not extend beyond the edge of the cooking utensil.
   Excessive flame is hazardous.
- Never use your cooktop for warming or heating the room. Prolonged use of the cooktop without adequate ventilation can be hazardous.
- Do not store or use gasoline or other flammable vapors and liquids near this or any other appliance. Explosions or fires could result.

MARNING The electrical power to the cooktop must be shut off while gas line connections are being made. Failure to do so could result in serious injury or death.

# GAS COOKTOP INSTALLATION INSTRUCTIONS (For 30" & 36" Models)

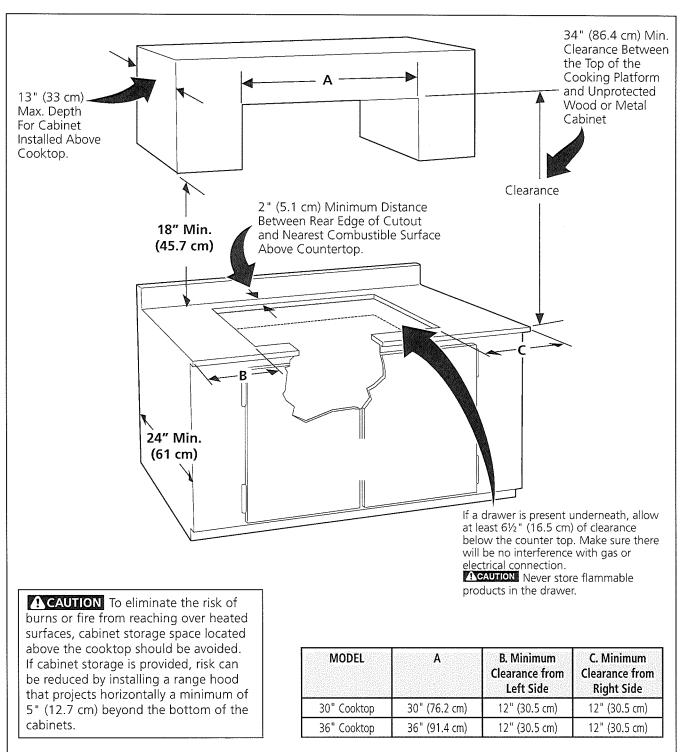


Figure 2 - CABINET DESIGN

### FRIGIDAIRE

GALLERY.




## French Door Refrigerator

FGHG2366PF


23 Cu. Ft. Counter-Depth



### Signature Features

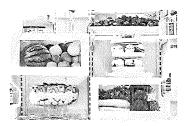

 
Adjustable Interior Storage Over 100 ways to organize and customize your refrigerator.



Smudge-Proof™ Stainless Steel Protective coating on true stainless steel which reduces fingerprints and smudges so it's easy to clean.



 SpaceWise\* Slide-Under Shelf Easily make room for tall or large items with the new Slide-Under Shelf.



Best-in-Class Filtration<sup>1</sup> PureSource Ultra\* Filtration is best-in-class so you get cleaner, better-tasting ice at your fingertips

### **Product Dimensions**

Height (Including Hinges & Rollers) 69-7/8" Width (Doors) Depth (Including Door) 28-1/2"

### More Easy-To-Use Features

Quick Ice delivers up to 37% more ice.2

Multi-Level LED Lighting Corner-to-corner LED lighting throughout the refrigerator for better visibility.

#### Counter-Depth Design

Maximize your kitchen space with our counter-depth refrigerator that gives you back 5 inches of kitchen space while still offering over 100 ways to organize.

Full-Width Cool Zone™ Drawer
A large capacity Cool Zone™ Drawer
extends completely and provides space to
easily store anything from sheet cakes and
large platters to snacks and juice boxes.

Express-Select\* Controls Easily select options with the touch of a button.

Freezer Basket with Divider Deep freezer storage with adjustable divider keeps food organized and accessible.

Quick Freeze
Quickly freeze foods so they stay at their freshest.

Effortless™ Glide Crisper Drawers Our humidity-controlled crisper drawers can be configured any number of ways, either side-by-side or stacked on top of each other so you can organize your refrigerator the way you want, while keeping your fruits and vegetables fresh.

Effortless™ Glide Freezer Drawers Drawers glide out smoothly and fully extend, giving you easy access to what's inside.

ENERGY STAR\* Sabbath Mode (Star-K\* Certified)



### Available in:

Stainless (F)

'As compared to other consumer refrigeration water filtration systems.

<sup>2</sup>In a 24-hour period.

frigidaire.ca

 
### FRIGIDAIRE


GALLERY.


### French Door Refrigerator

FGHG2366PF 23 Cu. Ft. Counter-Depth

Features	-115-6-1-6-10
Door Design	Soft-Arc Doors
Door Handle Design	Stainless Steel
Cabinet Finish	Grey
Door Stops/Door Closers	Yes/Yes
Door Hinge Covers	Hidden
Rollers - Front/Rear	Adjustable/Yes
Energy Saver Plus Technology	Yes
Water Filter Location	Top-Right Fresh Food Section
Sound Package	Quiet Pack
Control Features	
Controls	Express-Select*
Control Panel Location	
anno comencia que se mesenciamen e consecuencia con comitato escribir incomitato de la consecuencia de la comp	Left Door, Inside Edge
Number of Control Buttons	
Ice Option/Freeze Option	Quick Ice/Quick Freeze
Display On/Off Option	
Lock	Land Control of the C
Temp/Door Ajar/Power Failure Alerts	adidudia ederada a salah s
Water Filter Change Indicator Light	Yes
Air Filter Change Indicator Light	Yes
Refrigerator Features	
Lighting	Multi-Level LED
Water Filter Type	PureSource Ultra*
Air Filter Type	PureAir Ultra*
Quarter-Width Fixed Shelves	
Half-Width Fixed Shelves	1 SpillSafe* Slide-Under
and the second control of the second control	Tophicale State Officer
Quarter-Width Sliding Shelves	7.0.110.63
Half-Width Sliding Shelves	3 SpillSafe*
Cantilever Shelves	Yes
Store-More™ Full-Width Drawer	1 Cool Zone™
Hanging Wine Rack	1 White
Hanging Can Dispenser	profita a company
Crisper Drawer/Humidity Controls	2 Clear/2
Dairy Compartment	2 Clear (1 per door)
Store-More™ Fixed Door Bins	2 White (1 per door)
2-Litre Fixed Door Bins	
Gallon Adjustable Door Bins	4 Clear
2-Litre Adjustable Door Bins	
a manage and a second of the s	
Dispenser Bin	
Non-Slip Bin Liner/Bottle Retainers	
Freezer Features	
Self-Closing Pull Out Drawer	Yes
and the second s	
Sliding Full-Width Freezer Baskets	2 Effortless* Glide
Basket Dividers	1 (Bottom Basket)
Lighting	LED
Ice Maker	Yes
Certifications	
Sabbath Mode (Star-K" Certified)	Yes
ENERGY STAR*	Yes
	tama amanan kalandaran saki senera seriki kerebesi berebesi berbesi berebesi berbesi berebesi
Specifications	
Total Capacity (Cu. Ft.)	22.6
Refrigerator Capacity (Cu. Ft.)	15.7
Freezer Capacity (Cu. Ft.)	6.9
Power Supply Connection Location	Right Bottom Rear
Water Inlet Connection Location	Left Bottom Rear
Voltage Rating	120V/60Hz/15 or 20A
VOILAGE RAILING	ALOV / GOLIZ / IS OF ZUA
معاملات المستسلط فللكتف بتحالي البيان المستسلط فالماران	Fig. 2 and the company of the comment of the commen
Connected Load (kW rating)	1.02
Connected Load (kW rating) @ 120 Volts¹	
Connected Load (kW rating) @ 120 Volts¹ Amps @ 120 Volts	8.5
Connected Load (kW rating) @ 120 Volts¹	



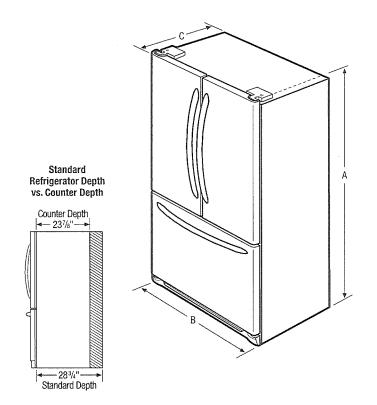

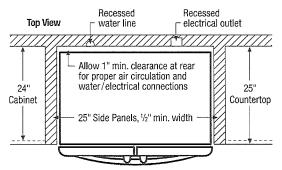

NOTE: For planning purposes only. Always consult local and national electric and plumbing codes. Refer to Product Installation Guide for detailed installation instructions on the web at frigidaire.ca.



Product Dimensions	
A-Height (Incl. Hinges & Rollers)	69-7/8"
B-Cabinet Width/Door Width	35-7/8"/36"
C-Depth (Incl. Door)	28-1/2"
Depth with Door Open 90°	42-1/2"
Depth with Drawer Fully Extended (Incl. Handle)	45-1/2"

"Built-In Look" Cutout Dimensions	
Height (Incl. Hinges and Rollers)	70-1/4"
Width	36"
Depth ways a spreading of the company of the	

Accessories information available on the web at **frigidaire.ca** 

### FRIGIDAIRE

CANADA • 5855 Terry Fox Way • Mississauga, ON L5V 3E4 • 1-800-265-8352 • frigidaire.ca FGHG2366P 08/13 © 2013 Electrolux Major Appliances, NA Specifications subject to change. Printed in Canada

INSTALLATION AND SERVICE MUST BE PERFORMED BY A QUALIFIED INSTALLER.
IMPORTANT: SAVE FOR LOCAL ELECTRICAL INSPECTOR'S USE.
READ AND SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.

United States and Canada



**A WARNING** FOR YOUR SAFETY: Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.

Your new wall oven has been designed to fit a limited variety of cutout sizes to make the job of installing easier. The first step of your installation should be to measure your current cutout dimensions and compare them to the cutout dimensions chart below for your model. You may find little or no cabinet work is necessary.

A WARNING Do not remove spacers (if equipped) on the side walls and/or on the back of the built-in oven. These spacers center the oven in the space provided. The oven must be centered to prevent excess heat buildup that may result in heat damage or fire.

#### Hole for Cable 1. Base must be capable of supporting 225 pounds (102 kg). (right or 1" (2.5 cm) 2. Allow at least 21" (53.3cm) clearance in front of oven for door /left side Min. depth when it is open. depending 3. Dimension G (cutout depth) is on model) critical to the proper installation of the built-in oven. If the G oven decorative trim does not butt against the cabinet verify Н dimension G to assure it is the required depth. 40-15/16" (104 cm) (7.6 cm) 111/2 ٥٠ Max. (29.2 cm) Door Open 11/4" Spacer Electrical (see note 2) (3.2 cm) Suggested distance from floor Junction Box 2" (5 cm) Wide Wood (right or left side) is 11½" (29.2 cm). Spacer if Needed Minimum required distance is Figure 1 4 ½" (11.4 cm)

		PRO	DOUCT DIMENSIONS		, yan dan Maye	
MODEL	and any order of the	A	B garaganagan	ayya kanana C		D
27" (68.6cm) Wall Oven	27 (	68.6)	42¾ (108.6)	245/8 (	62.5)	24¾ (62.9)
30" (76.2cm) Wall Oven	30 (	76.2)	42¾ (108.6)	281⁄4 (	71.8)	24¾ (62.9)
	CL	JTOUT DIME	NSIONS AND CABIN	ET WIDTH	. Jesteroppe (1849) sed	
MODEL	Min.	F Max.	G. Min.	H Min.	l Max.	
27" (68.6cm) Wall Oven	24 <sup>7</sup> / <sub>8</sub> (63.2)	25¼ (64.1)	23¾ (60.3)	411/8 (104.5)	41¼ (104.8)	27 <sup>1</sup> / <sub>8</sub> (68.9) Min
30" (76.2cm) Wall Oven	28½ (72.4)	29 (73.7)	23¾ (60.3)	411/8 (104.5)	41¼ (104.8)	30 <sup>1</sup> / <sub>8</sub> (76.5) Min

7 th difficiono dio etated in menes and

P/N 807611001 (1304) Rev. A English – pages 1-6 Español – páginas 7-12 Français - pages 3-19

1

### Important Notes to the Installer

- 1. Read all instructions contained in these installation instructions before installing the combination oven.
- Remove all packing material from the oven compartments before connecting the electrical supply to the wall oven.
- 3. Observe all governing codes and ordinances.
- Be sure to leave these instructions with the consumer.
- 5. Oven door may be removed to facilitate installation.
- 6. THIS COMBINATION OVEN IS NOT APPROVED FOR STACKABLE OR SIDE-BY-SIDE INSTALLATION.

#### Important Note to the Consumer

Keep these instructions with your Owner's Guide for future reference. Do not discard oven removal tools found in the literature bag.

# IMPORTANT SAFETY INSTRUCTIONS

- Be sure your combination oven is installed and grounded properly by a qualified installer or service technician
- This wall oven must be electrically grounded in accordance with local codes or, in their absence, with the National Electrical Code ANSI/NFPA No.70latest edition in United Sates, or with CSA Standard C22.1, Canadian Electrical Code, Part 1, in Canada.

**A WARNING** Stepping, leaning or sitting on the door of this wall oven can result in serious injuries and can also cause damage to the wall oven.

 Never use your wall oven for warming or heating the room. Prolonged use of the wall oven without adequate ventilation can be dangerous.

A WARNING The electrical power to the oven must be shut off while line connections are being made. Failure to do so could result in serious injury or death.

### 1. Carpentry

Refer to figure 1 for the dimensions applicable to your appliance, and the space necessary to receive the combination oven. The oven support surface may be solid plywood or similar material, however the surface must be leveled from side to side and from front to rear.

### 2. Electrical Requirements

This appliance must be supplied with the proper voltage and frequency, and connected to an individual, properly grounded branch circuit, protected by a circuit breaker or fuse. To know the circuit breaker or fuse required by your model, see the serial plate to find the wattage consumption and refer to table A to get the circuit breaker or fuse amperage.

Observe all governing codes and local ordinances

Appliance Rating Watts 240V	Protection Circuit Recommended	Appliance Rating Watts 208V	Protection Circuit Recommended
Less than 4800W	20A	Less than 4100W	20A
4801W - 7200W	30A	4101W - 6200W	30A
7201W - 9600W	40A or 50A	6201W - 8300W	40A or 50A
9601W and +	50A	8301W and +	50A

Table A

1.A 3-wire or 4-wire single phase 120/240 or 120/208 Volt, 60 Hz AC only electrical supply is required on a separate circuit fused on both sides of the line (red and black wires). A time-delay fuse or circuit breaker is recommended. DO NOT fuse neutral (white wire). Only certain cooktop models may be installed over certain built-in electric oven models. Approved cooktops and built-in ovens are listed by the MFG ID number (see the insert sheet included in the literature package).

NOTE: Wire sizes and connections must conform with the fuse size and rating of the appliance in accordance with the American National Electrical Code ANSI/NFPA No. 70-latest edition, or with Canadian CSA Standard C22.1, Canadian Electrical Code, Part 1, and local codes and ordinances.

**A WARNING** An extension cord should not be used with this appliance. Such use may result in a fire, electrical shock, or other personal injury. If you need a longer power cord you can purchase a 10' (3 m) power cord kit #903056-9010 by calling the Service Center.

- 2. These appliances should be connected to the fused disconnect (or circuit breaker) box through flexible armored or nonmetallic sheathed cable. The flexible armored cable extending from the appliance should be connected directly to the junction box. The junction box should be located as shown in Figure 1 or Figure 2 and with as much slack as possible remaining in the cable between the box and the appliance, so it can be moved if servicing is ever necessary.
- 3. A suitable strain relief must be provided to attach the flexible armored cable to the junction box.

### **A WARNING**

Electrical Shock Hazard

- Electrical ground is required on this appliance.
- Do not connect to the electrical supply until appliance is permanently grounded.
- Disconnect power to the junction box before making the electrical connection.
- This appliance must be connected to a grounded, metallic, permanent wiring system, or a grounding connector should be connected to the grounding terminal or wire lead on the appliance.
- Do not use a gas supply line for grounding the appliance.

Failure to do any of the above could result in a fire, personal injury or electrical shock.

**CAUTION** In cold weather shipping and storage conditions, make sure that oven is in final location at least three (3) hours before switching on power. Switching on power while oven is still cold may damage the oven controls.

### 3. Electrical connection

It is the responsibility and obligation of the consumer to contact a qualified installer to assure that the electrical installation is adequate and is in conformance with the National Electrical Code ANSI/NFPA No. 70-latest edition, or with CSA Standard C22.1, Canadian Electrical Code, Part 1, and local codes and ordinances.

heed this warning may result in electrocution or other serious injury.) This appliance is equipped with copper lead wire. If connection is made to aluminum house wiring, use only connectors that are approved for joining copper and aluminum wire in accordance with the National Electrical Code and local code and ordinances. When installing connectors having screws which bear directly on the steel and/or aluminum flexible conduit, do no tighten screws sufficiently to damage the flexible conduit. Do not over bend or excessively distort flexible conduit to avoid separation of convolutions en exposure of internal wires.

DO NOT ground to a gas supply pipe. DO NOT connect to electrical power supply until appliance is permanently grounded. Connect the ground wire before turning on the power.

**AWARNING** (If your appliance is equipped with a white neutral conductor.)


This appliance is manufactured with a white neutral power supply and a frame connected copper wire. The frame is grounded by connection of grounding lead to neutral lead at the termination of the conduit, if used in USA, in a new branch circuit installation (1996 NEC), mobile home, recreational vehicles, where local code do not permit grounding trough the neutral (white) wire or in Canada, disconnect the white and green lead from each other and use ground lead to ground unit in accordance with local codes, connect neutral lead to branch circuit-neutral conductor in usual manner see Figure 4. If your appliance is to be connected to a 3 wire grounded junction box (US only), where local code permit connecting the appliance-grounding conductor to the neutral (white) see Figure 3.

NOTE TO ELECTRICIAN: The armored cable leads supplied with the appliance are UL-recognized for connection to larger gauge household wiring. The insulation of the leads is rated at temperatures much higher than temperature rating of household wiring. The current carrying capacity of the conductor is governed by the temperature rating of the insulation around the wire, rather than the wire gauge alone.

Where local codes permit connecting the appliance-grounding conductor to the neutral (white) wire (US Only) (see figure 3):

- 1. Disconnect the power supply.
- In the junction box: Connect appliance and power supply cable wires as shown in Figure 3.


If oven is used in a new branch circuit installation (1996 NEC), mobile home, recreational vehicle, or

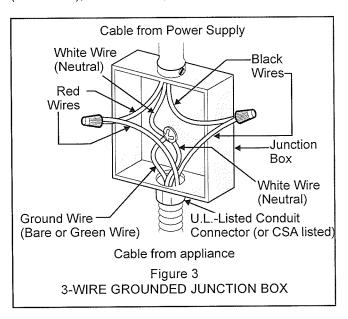

where local codes DO NOT permit grounding through the neutral (white) wire, the appliance frame MUST NOT be connected to the neutral wire of the 4-wire electrical system. (see figure 4):

- 1. Disconnect the power supply.
- 2. Separate the green (or bare copper) and white appliance cable wires.
- 3. In the junction box:


  Connect appliance and power supply cable wires as shown in Figure 4.

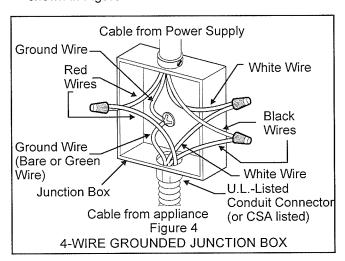

### Model and Serial Number Location

The serial plate is located along the interior side trim of the oven and visible when the door is opened.

When ordering parts for or making inquires about your oven, always be sure to include the model and serial numbers and a lot number or letter from the serial plate on your oven.

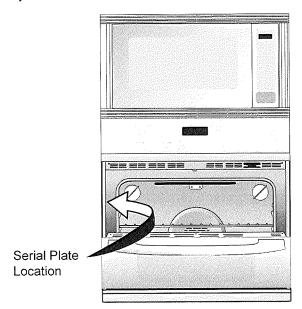

### 4. Cabinet Installation


### **IMPORTANT NOTE**

Do not lift the oven by the door handle.

### **A WARNING**

### Heavy Weight Hazard

- Use 2 or more people to move and install wall oven.
- Failure to follow this instruction can result in injury or damage to the unit.
- 1. Unpack the wall oven. Remove the bottom trim taped on the oven side panel.
- 2. Find the 2 anti-tip mounting screws included in the oven cavity.
- Insert the oven into the cabinet opening. Slide oven inward leaving 1½" (3.8 cm) clearance between the oven and front of cabinet (see Figure 5).
- 4. Pull the armored cable through the hole for it in the cabinet and toward the junction box while moving the appliance inward.
- Push the oven in and against the cabinet.

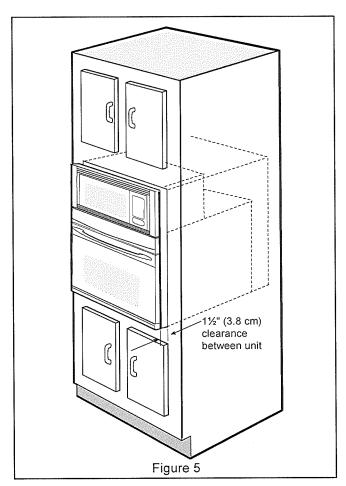

### Install the Anti-tip Mounting Screws

! WARNING The wall oven can tip when the door is open. The anti-tip mounting screws supplied with the wall oven must be installed to prevent tipping of the wall oven and injury to persons.

A. The mounting holes in the side trims may be used as a template to locate the appliance mounting screw holes (see figure 6).

B. Use the two screws supplied to fix the appliance to the cabinet.


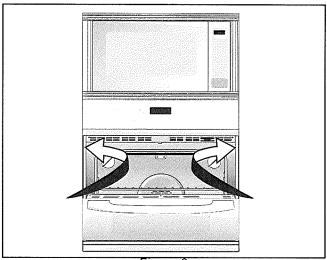


Figure 6

### ! WARNING Tip Over Hazard



- A child or adult can tip the oven and be killed.
- Install the anti-tip device to oven and/or structure per installation instructions.
- Ensure the anti-tip device is re-engaged when the oven is moved.
- Do not operate the oven without the anti-tip device in place and engaged.
- · Failure to follow these instructions can result in death or serious burns to children and adults.

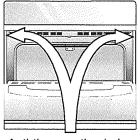

Anti-tip mounting holes


Refer to the installation instructions supplied with your appliance for proper installation.

Check for proper installation with a visual check that the anti-tip screws are present. Test the installation with light downward pressure on the open oven door. The oven should not tip forward.

### 7. Install the Bottom Trim


IMPORTANT: Bottom trim must be installed for the oven to function properly. DO NOT operate the oven without the bottom oven trim installed.

Place the top of the bottom trim over the side trim tabs on each side of the oven below the oven door and fix it using the 2 screws supplied in the mounting holes located on each side trim below the oven frame (see Figure 7).

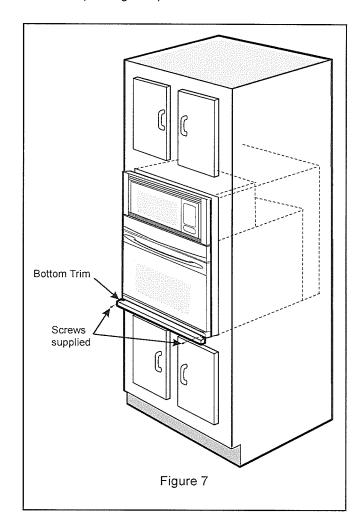

### 5. Leveling the Wall Oven

- 1. Install an oven rack in the center of the upper oven (see Figure 8).
- 2. Place a level on the rack. Take 2 readings with the level placed diagonally in one direction and then the other. Use wood shims under the wall oven to level if necessary.
- Repeat in the lower oven if you have a double cavity wall oven. If the level indicates that the rack is not level, use wood shims to reach a compromise for both ovens.

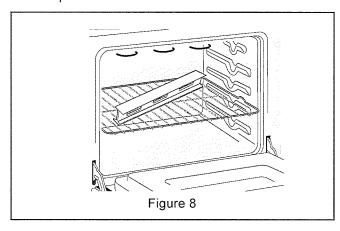

### **IMPORTANT NOTE**

A cooling fan inside the upper rear part above the oven (some models) provides cooling of the oven electrical and electronic components. If the oven has been operating at high temperatures, the fan will continue to run after the oven is turned off.

### 7. Checking Operation

Your model is equipped with an Electronic Oven Control. Each of the functions has been factory checked before shipping. However, it is suggested that you verify the operation of the electronic oven controls once more. Refer to the Use and Care Guide for operation.

- 1. Remove all items from the inside of the oven.
- Turn on the power to the oven (Refer to your Use & Care Guide.)
- Verify the operation of the electronic oven controls:
   Bake Verify that this function makes the oven hot.
   seconds after turning oven on, open the door and you should feel heat coming from the oven.

Broil - When the oven is set to BROIL, the upper element in the oven should become red.

### Before You Call for Service

Read the Before You Call for Service Checklist and operating instructions in your Use and Care Guide. It may save you time and expense. The list includes common occurrences that are not the result of defective workmanship or materials in this appliance.

Refer to your Use and Care Guide for service phone numbers.



About Us (http://www.coastappliances.com/prod/bttp/d/imensionastappliances.com/pages/whycoast)

Contact us

(http://www.coastappliances.com/page(http://www.coastappliances.com/page(http://hww.coastappliances.com/page(http://hww.coastappliances.com/page(http://hww.coastappliances.com/page(http://hww.coastappliances.com/page(http://hww.coastappliances.com/page(http://hww.coastappliances.com/page(http://hww.coastappliances.com/page(http://hwc.atappliances.com/page(http://hwc.atappliances.com/page(http://hwc.atappliances.com/page(http://hwc.atappliances.com/page(http://hwc.atappliances.com/page(http://hwc.atappliances.com/page(http://hwc.atappliances.com/page(http://hwc

Search by Dimension

Protection Plans

### FRIGIDAIRE GALLERY

### Dishwashers

FGID2474Q F/W/B



### Signature Features



OrbitClean\* Wash System
Exclusive OrbitClean\* Spray Arm
provides 4 times better water coverage¹
for an excellent clean. And AquaSurge™
Technology adjusts washing pressure
based on washing needs.



Effortless™ Dry System
Move your dishes straight to your
cabinets with our Effortless™ Dry
System. Towel drying becomes a
thing of the past.



Quick Wash<sup>2</sup> 30-Minute Wash Washes a full load of dishes in a quarter of the time! Perfect solution for those times when you need clean dishes quickly, but have a million things to do.



Delicate-Care™ Soft Grips
No more need to hand wash your
fragile dishes with our Delicate-Care™
Soft Grips that secure fragile dishes in
the dishwasher with a soft rubber grip.

### 24" Built-In

### **Product Dimensions**

 Height (Adjustable)
 33-3/4" - 35-3/4"

 Width
 23 - 3/4"

 Depth (Including Door)
 24-1/4"

### More Easy-To-Use Features

2 Cup Shelves with Stemware Grips

Adjustable Upper Rack

5 Level Wash

Fold-Down Tines

Cycle Complete Floor Beam Indicator

**Fully Integrated Controls** 

Smudge-Proof™ Stainless Steel³ Resists fingerprints and smudges so it's easy to clean.

Stainless Tub

51 dBA

ENERGY STAR'
NSF' International
Certification





### Available in:



 
<sup>1</sup>Than a traditional lower spray arm. <sup>2</sup>30 or 34 minutes depending on model, based on normal cycle.


<sup>3</sup> Select model only.

frigidaire.ca

FGID2474Q F/W/B 24" Built-In

Control Design	Fully-Integrated Express-Select'
Digital Display	Yes
Door Latch/Stay-Put Door Hinge Design	Yes/Yes
Low Rinse-Aid Indicator Light	553000000000000000000000000000000000000
Interior Design/Interior Colour	Tall Tub/Stainless Stee
Wash System	Direct Feed
Wash Arm	OrbitClean*
Wash Levels/Wash Speeds	5/5
DishSense™ Technology	Yes
AquaSurge™ Technology	Yes
Sound Package	SilentDesign™
Filter/Filter Trap	S. Steel/Removable
Soft Food Disposer	
dB Level	51
Drying System (Fan Assisted)	Effortless™ Dry
Cycles	and the second s
Number of Cycles	[7]
PowerPlust (Heavy)	Yes
Normal	Yes
Light	
Quick Wash (30-Min.)	Yes
Favourite	Yes
China Crystal	Yes
Rinse Only	Yes
Energy Saver Plus	Yes
Upper Rack Wash Only	
Cycle Indicator Light/Control Lock	No/Yes
Cycle Complete Floor Beam Indicator	LED .
Options	
Heat/No Heat Dry	Yes
Hi-Temp Wash	Yes
NSF* Certified Sanitize Rinse	Yes
Delay Start	1-24 Hour
and the second s	1 24 Hour
Rack System	
Rack Design	Deluxe
Rack Coating	Nylon TufRacks™
Upper Rack -	a anno airean agus agus agus agus agus agus agus agus
Rack Handles	Yes
Delicate-Care™ Soft Grips	Yes
Fold-Down Tines	Yes
Cup Shelves/Stemware Grips	2/6
Utensil Tray	
Adjustable Rack Height	Yes
Lower Rack -	
SpaceWise <sup>*</sup> Silverware Basket	3-Piece Split
Fold-Down Tines	2 Full Rows
Small Items Cover	3
Certifications	
ENERGY STAR*	Yes
NSF* International Certification	Yes
Specifications	and the second s
Water Inlet Location	Left Bottom Front
	4.0 - 8.0
Water Usage (Gallons)	20 - 120
	The second secon
Water Usage (Gallons)	Yes
Water Usage (Gallons) Water Pressure (PSI)	
Water Usage (Gallons) Water Pressure (PSI) Integral Air Gap on Supply Leveling Legs	Yes
Water Usage (Gallons) Water Pressure (PSI) Integral Air Gap on Supply Leveling Legs Power Supply Connection Location	Yes 4
Water Usage (Gallons) Water Pressure (PSI) Integral Air Gap on Supply Leveling Legs Power Supply Connection Location Voltage Rating	Yes 4 Right Bottom Front 120V/60 Hz/15A
Water Usage (Gallons) Water Pressure (PSI) Integral Air Gap on Supply Leveling Legs Power Supply Connection Location	Yes 4 Right Bottom Front 120V/60 Hz/15A



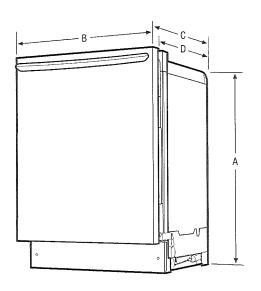

NOTE: For planning purposes only. Always consult local and national electric and plumbing codes. Refer to Product Installation Guide for detailed installation instructions on the web at frigidaire.ca.



Product Dimensions	
A-Height (Adjustable)	33-3/4" - 35-3/4"
B-Width	23-3/4"
C-Depth (Including Door)	24-1/4"
D-Depth (To Tub Flange)	22-1/2"
Depth with Door Open 90°	50-1/4"

Cutout Dimensions	
Height (Min.)	34"
Height (Max.)	35-3/4"
Width (Min.)	24"
Depth (Min.)	24"

Accessories information available

### FRIGIDAIRE

CANADA • 5855 Terry Fox Way • Mississauga, ON L5V 3E4 • 1-800-265-8352 • frigidaire.ca

FGID2474Q 05/14 © 2014 Electrolux Major Appliances, NA

Specifications subject to change. Printed in Canada