


Lot 319

Specifications (Column Installation)

30" Stainless Steel Microwave Trim Kit

VOID CUT-OUT

1. Being careful not to scratch the microwave door, and move it back about 2 inches.
2. Place the MWTK-76/9 into position. Use the 4 screws and screw them through the flanges into the side gables.
3. Pull the microwave forward, and align the front of the microwave with the front of the MWTK-76/9.
4. To stop the microwave from sliding backwards whilst opening the door. It will be necessary to attach stops behind the feet of the microwave
5. Air must be able to flow from the microwave upwards and into the room, or roof space. Failure to comply will void the manufacturer's warranty on the microwave oven.

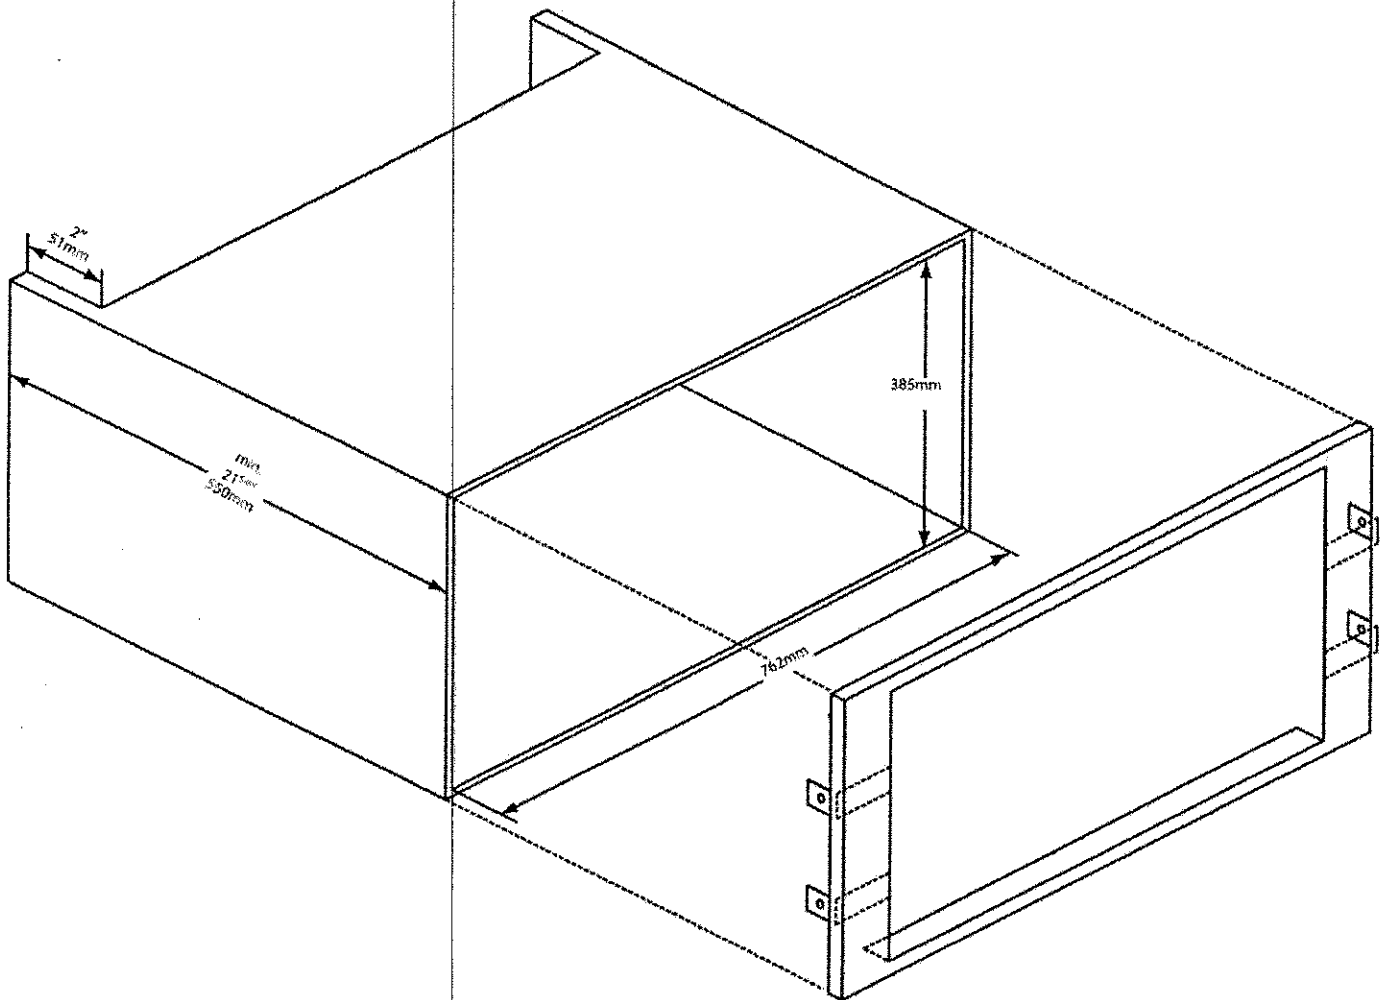


Specifications are subject to change without notice
V1.0



MWTK76/9

30" Stainless Steel Microwave Trim Kit

Side View

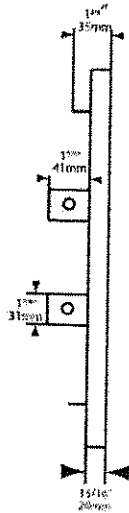

Front View

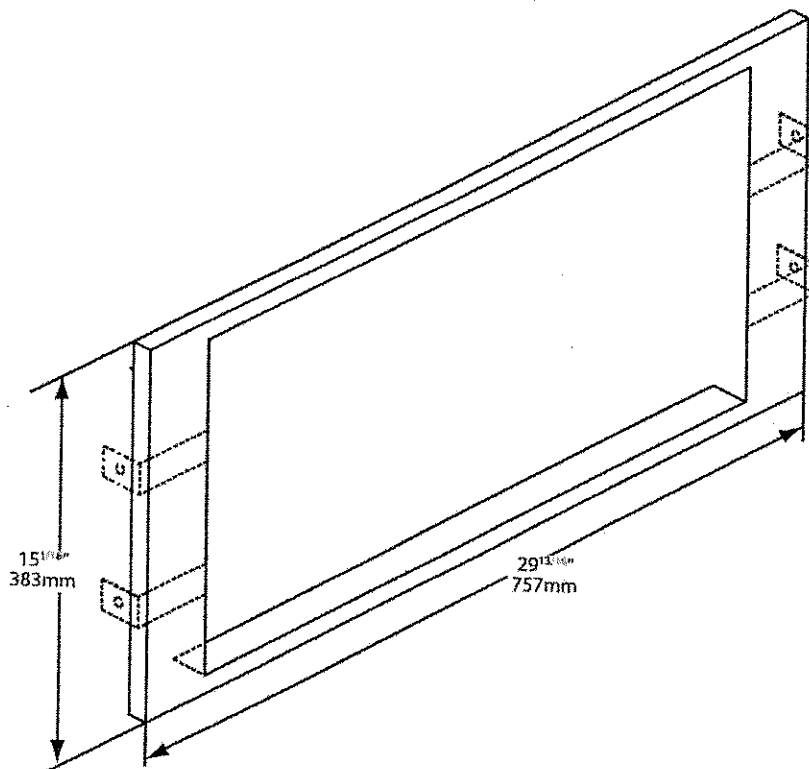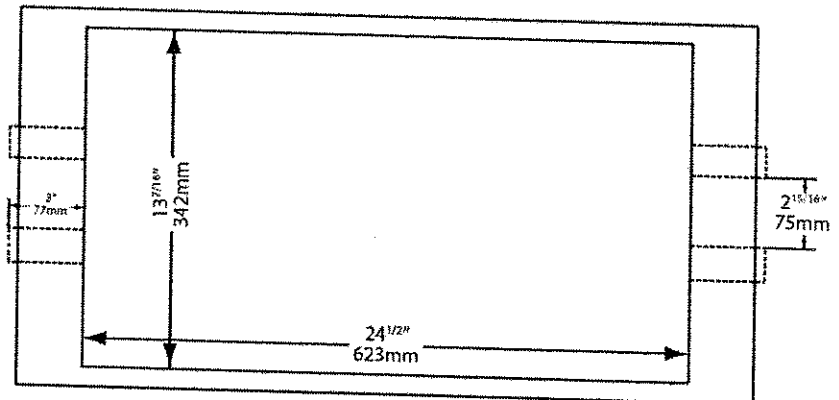

Specifications are subject to change without notice
V1.0