


Installation Instructions

1 CABINET REQUIREMENTS


Cabinet must comply with these dimensions.

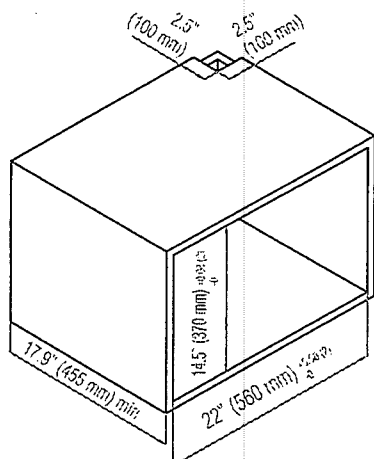

2 INSTALL LOWER EXHAUST GUIDE

Turn the Microwave upside down and install the Lower Exhaust Guide using three M4 x 8 screws.


NOTE: Ensure the orientation of the Rear flange is correct (i.e. Opening pointing forward).

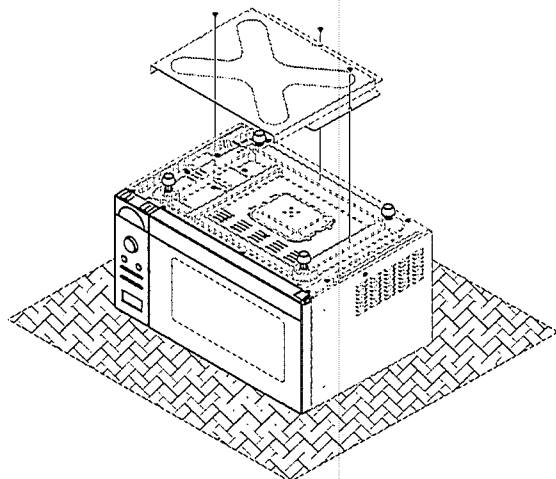

3 INSTALL UPPER EXHAUST GUIDE


Return the Microwave to its upright position and install the Upper Exhaust Guide using four M4 x 8 screws.

NOTE: Ensure the orientation of the Rear flange is correct (i.e. Opening pointing forward).

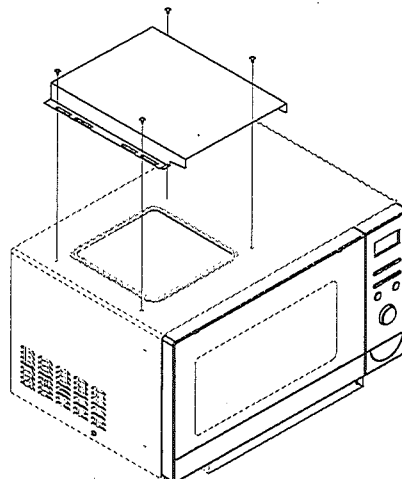

4 INSTALL TRIM PIECE

Mount Trim Piece onto the front of the Microwave and secure on both sides using four M4 x 10 screws, 2 on each side.

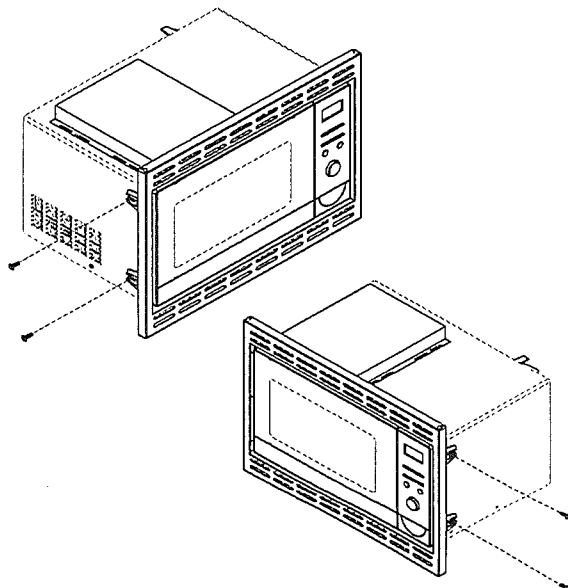


CW
Lot 38

Installation Instructions


5 MOUNT MICROWAVE

- A** Place the Microwave close to the Cabinet opening and fit the Power Cord (Plug End first) through the 2.5" x 2.5" (100 mm x 100 mm) opening.
- B** Slide the microwave into the Cabinet and, at the same time, ensure the Power Cord continues to be drawn through the opening.

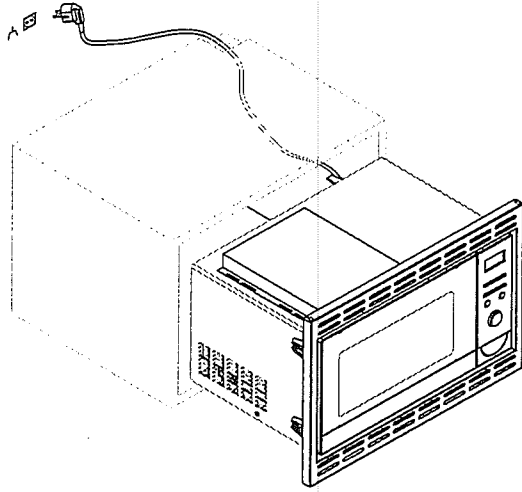

6 FASTEN THE MICROWAVE

Centre the Microwave in the opening, pre-drill 4 holes through the Trim Piece into the Cabinet then attach the Microwave/Trim Piece assembly to the Cabinet using 4 M3 x 20 screws (1 in each corner).

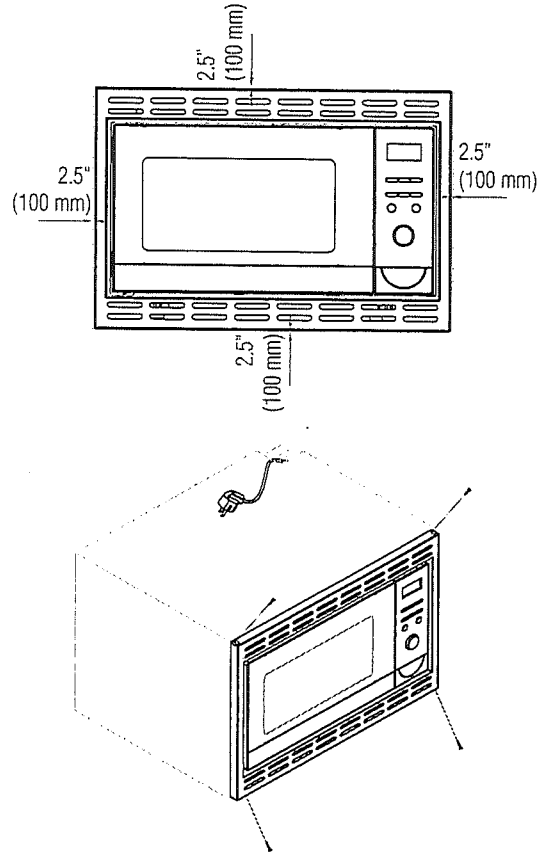

CW
Lot 38

350A4502P714
29-5792

08-011 ATS

Printed in China