

LOT 30 NGP4

# 1. DIMENSIONS OF THE INSTALLATION OPENING (FIG. 1)

The following opening dimensions in feet must be available in the installation cabinet:

HEIGHT : 16 1/2" , WIDTH : 25 1/2" , DEPTH : 19 1/2" or 22."

**WARNING:** This trim kit uses air flow from the top, bottom and sides of the trim frame. Blocking the air flow can cause the microwave to function improperly and may cause damage to the microwave.

Allow a 1" clearance beyond the edge of the trim frame to provide proper air flow. On 27" models, allow 1 1/8" at the top, 1 1/16" on the sides and 1 1/4" at the bottom for overlap of the Trim Frame over the edges of the cutout. On 30" models, allow 1 1/2" at the top, 2 1/4" on the sides and 1 1/4" at the bottom for overlap of the Trim Frame over the edges of the cutout.

## FOR INSTALLATION ABOVE A BUILT-IN OVEN

Microwave oven should be installed on a 3/8" plywood base and support by 2x4, or 1x2 equivalent runnerson all sides. Base must be capable of supporting a minimum of 100 lbs (45.3 kg).

## 2. INSTALL THE ANTI-TIP BRACE (FIG. 2)

1. Draw a line on the cutout floor at the center of the cutout, and extend the line 1/2" down the face of the cabinet.
2. Draw a line on the top front face of the cabinet at the center of the cutout. The line should extend 1/2" up the face of the cabinet. This center line will be used for mounting the top bracket (see step 7).
3. Fold or cut the front edge of the template, along the front guide line. Place the template flush along the front edge of the cutout floor, aligning the center line of the template with the center line of the cutout floor. Mark the center positions with an awl or center punch for the anti-tip brace location as shown.

## 3. INSTALL THE ANTI-TIP BRACKET AND BOTTOM DUCT (FIG. 3)

1. Disconnect the microwave oven before proceeding with the installation.
2. Fasten the anti-tip bracket to the bottom duct by using four round-head screws.
3. Remove any loose items inside the microwave oven, including the turntable and turntable support. Carefully turn the microwave upside down.
4. Install bottom duct with four round-head screws as shown.

FIG. 1

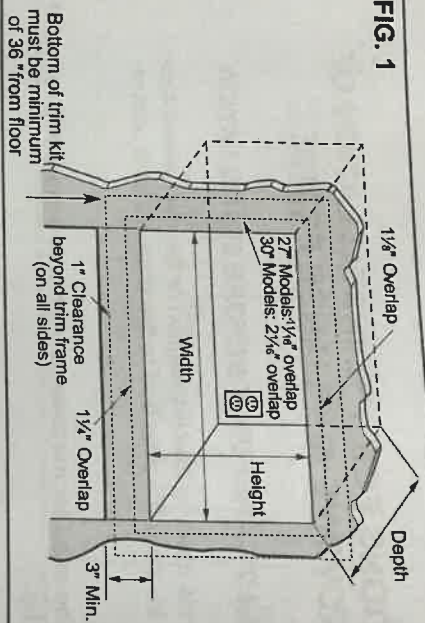


FIG. 2

DIMENSIONS:

- A = 1 1/2"
- B = 3"
- C = 18 3/16"
- D = 1/2"


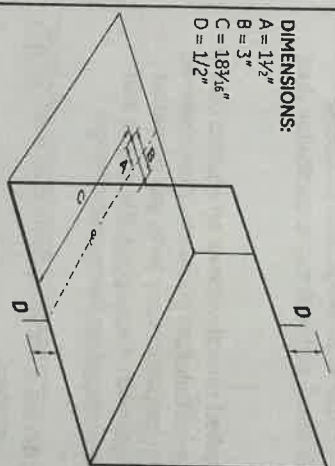


FIG. 3

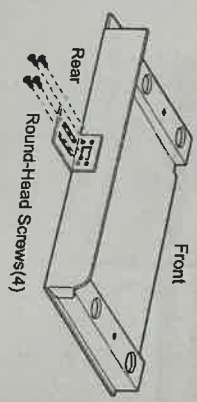

08-12-2020  
Model 24