


CHECKING THE INSTALLATION SITE

Clearances and dimensions

To install the range, refer to the following figure.

CAUTION This range has been designed to comply with the maximum allowable wood cabinet temperatures of 194 °F. Make sure the wall covering, countertops, and cabinets around the range can withstand the heat (up to 194 °F) generated by the range. If not, discoloration, delamination, or melting may occur.

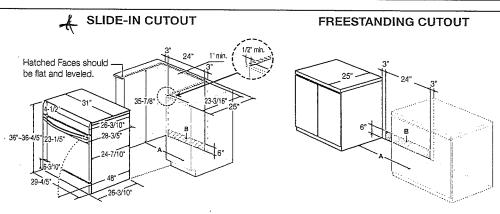

A: Cabinet opening min 30" (76.2 cm)

B: Acceptable electrical outlet area




If your cabinets are over 36-4/5" high, you must install this range on a hard, heat resistant support that raises the surface of the range so that it is about even with the countertop.

CAUTION You must use the rear filler kit to install the range in a freestanding cutout cabinet. For more information, see "Optional rear filler kit" as shown below.


Optional rear filler kit

Used to fill gap between the range back and wall. Adds a filler strip to the rear of the range. This kit can only be used when the opening in the countertop is 25" deep.

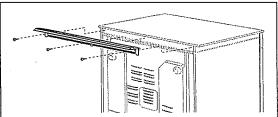



If the countertop depth is greater than 25", there will be a gap between the filler kit and the back wall.

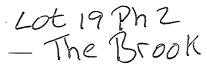

English - 5

